
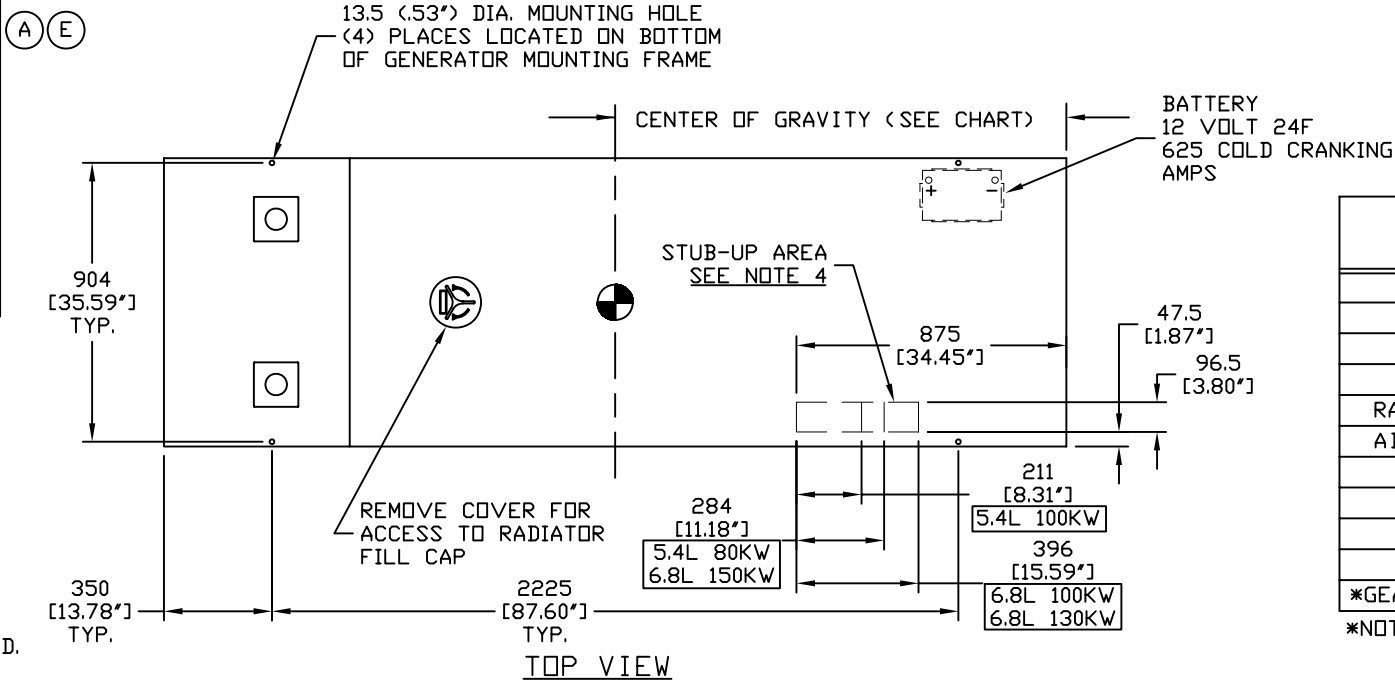
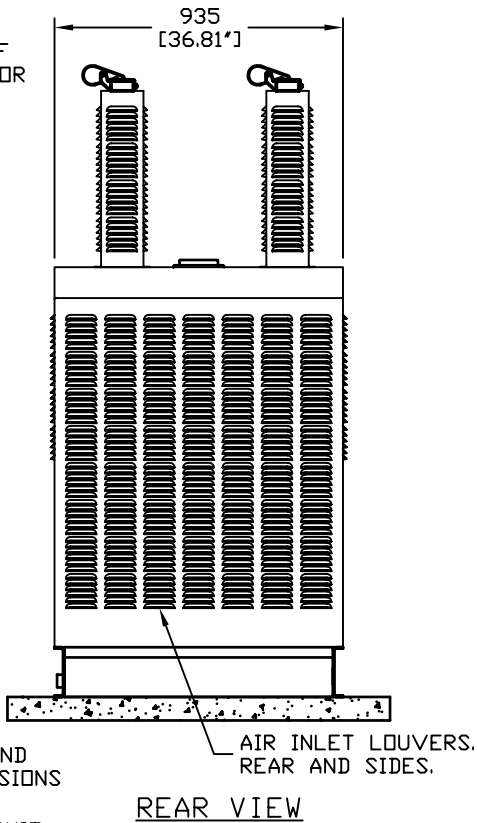
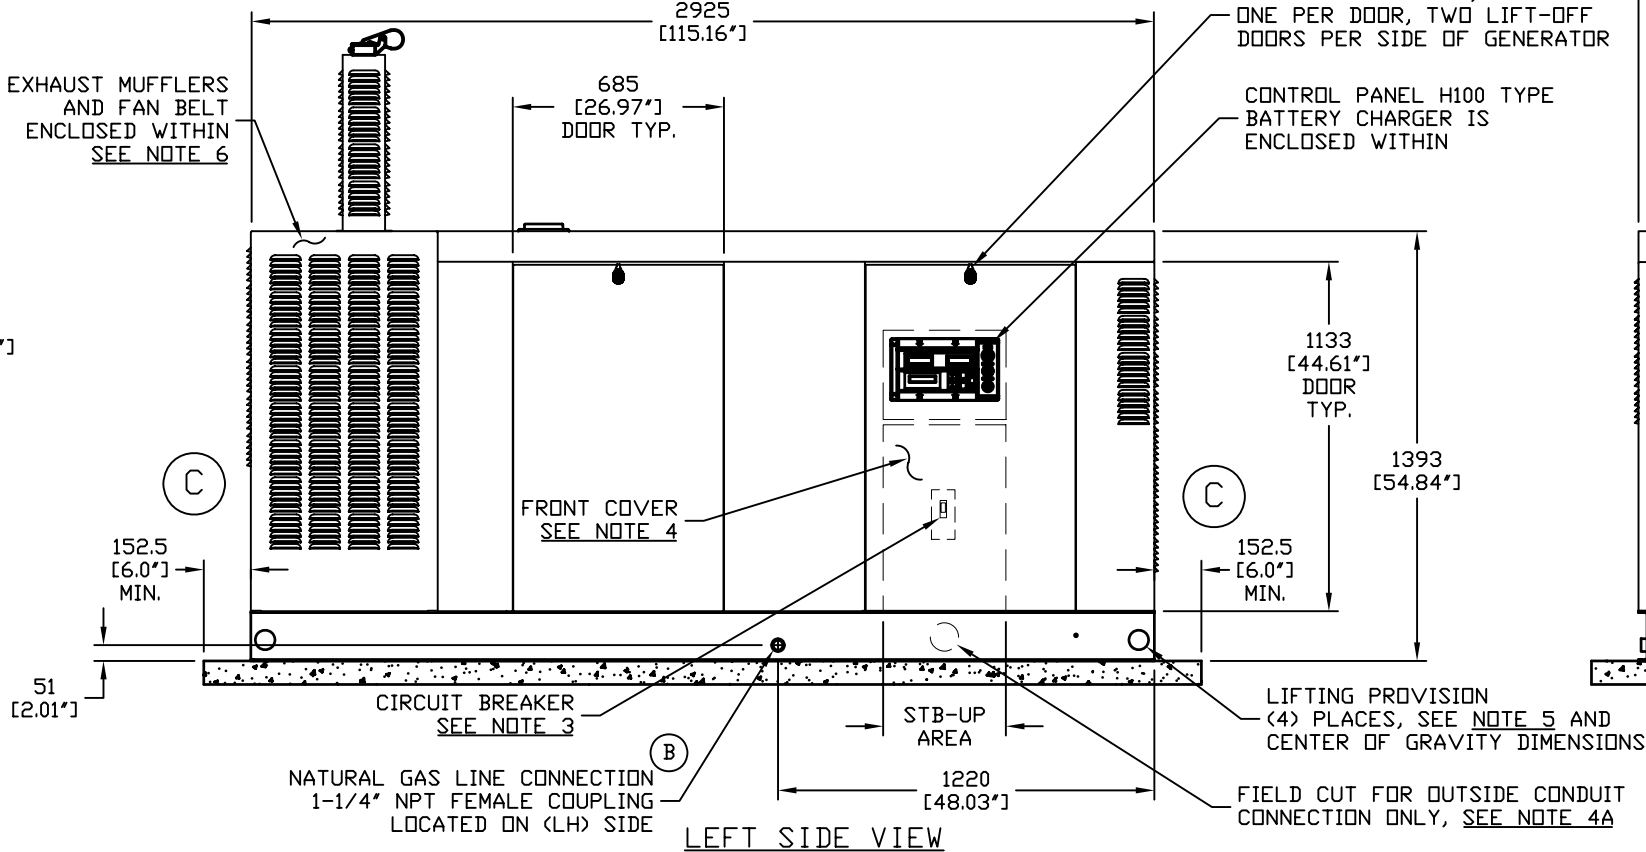


OF6289

WEIGHT DATA				
ENGINE/KW	ENCLOSURE MATERIAL	WEIGHT (GENSET ONLY) KG [LBS]	WEIGHT (WOODEN SHIPPING CRATE/SKID) KG [LBS]	SHIPPING WEIGHT (SKID AND GENSET) KG [LBS]
5. 4L/80KW	STEEL	1167 [2573]	79 [175]	1246 [2748]
	ALUMINUM	1088 [2399]	79 [175]	1168 [2574]
5. 4L/100KW	STEEL	1048 [2311]	79 [175]	1127 [2486]
	ALUMINUM	969 [2137]	79 [175]	1049 [2312]
6. 8L 100KW	STEEL	1227 [2705]	79 [175]	1306 [2880]
	ALUMINUM	1148 [2531]	79 [175]	1227 [2706]
6. 8L 130KW	STEEL	1287 [2837]	79 [175]	1383 [3048]
	ALUMINUM	1224 [2699]	79 [175]	1304 [2874]
6. 8L 150KW	STEEL	1209 [2666]	79 [175]	1289 [2841]
	ALUMINUM	1130 [2492]	79 [175]	1210 [2667]

- NOTES:
- 1) MINIMUM RECOMMENDED CONCRETE PAD SIZE: 1240(48.8') WIDE X 3230 (127.2') LONG. REFERENCE INSTALLATION GUIDE SUPPLIED WITH UNIT FOR CONCRETE PAD GUIDELINES.
 - 2) ALLOW SUFFICIENT ROOM ON ALL SIDES OF THE GENERATOR FOR MAINTENANCE AND SERVICING. THIS UNIT MUST BE INSTALLED IN ACCORDANCE WITH CURRENT APPLICABLE NFPA 37 AND NFPA 70 STANDARDS AS WELL AS ANY OTHER FEDERAL, STATE AND LOCAL CODES FOR MINIMUM DISTANCES FROM OTHER STRUCTURES.
 - 3) CIRCUIT BREAKER INFORMATION: SEE SPECIFICATION SHEET WITHIN OWNERS MANUAL.
 - 4) INSIDE STUB-UP AREA FOR AC LOAD LEAD CONDUIT CONNECTION, NEUTRAL CONNECTION, BATTERY CHARGER 120 VOLT AC (.5 AMP MAX.) CONNECTION, AND ACCESS TO TRANSFER SWITCH CONTROL WIRES. REMOVE FRONT COVER FOR ACCESS.
 - 4A) FIELD CUT HOLE IS ONLY REQUIRED FOR MOUNTING OF GENERATOR ON AN EXISTING PAD.
 - 5) REFERENCE OWNERS MANUAL FOR LIFTING WARNINGS.
 - 6) REMOVE EITHER LEFT OR RIGHT HAND SIDE PANEL TO ACCESS EXHAUST MUFFLERS AND FAN BELT.

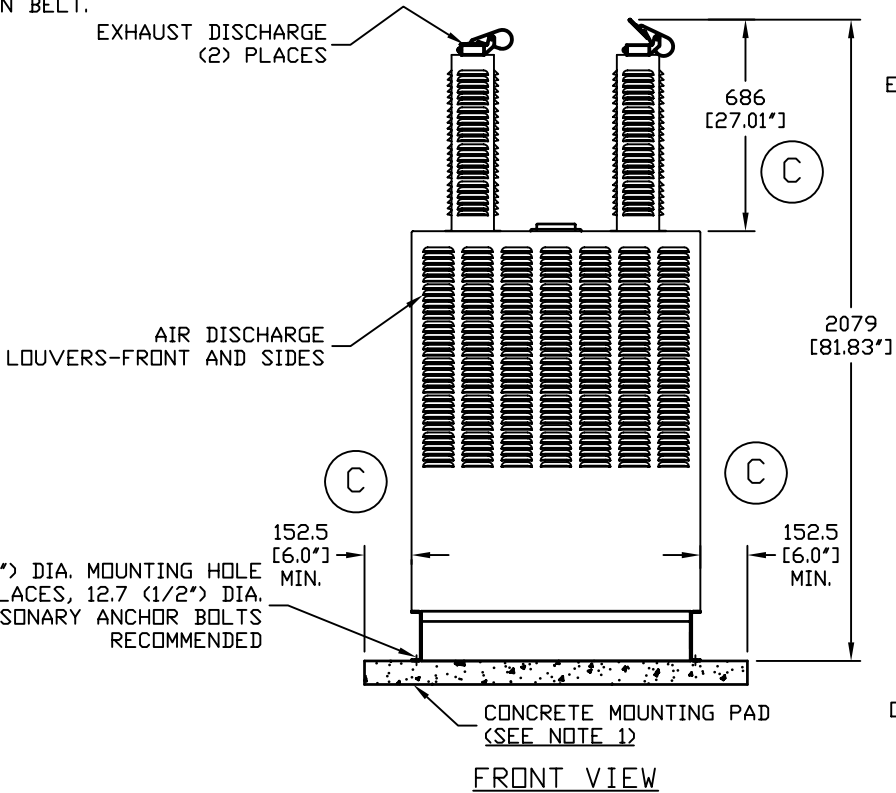

CENTER OF GRAVITY	
1310 (51.6')	- 80KW 5. 4L
1405 (55.3')	- 100KW 5. 4L
1275 (50.2')	- 100KW 6. 8L
1230 (48.4')	- 130KW 6. 8L
1315 (51.8')	- 150KW 6. 8L

SERVICE ITEM	ACCESS				
	80KW 5. 4L	100KW 5. 4L	100KW 6. 8L	130KW 6. 8L	150KW 6. 8L
OIL FILL CAP	THRU RIGHT FRONT DOOR				
OIL DIP STICK	THRU LEFT FRONT DOOR				
OIL FILTER	THRU LEFT FRONT DOOR				
OIL DRAIN HOSE	THRU RIGHT FRONT DOOR				
RADIATOR DRAIN HOSE	THRU LEFT FRONT DOOR				
AIR CLEANER ELEMENT	EITHER FRONT DOORS				
SPARK PLUGS	BOTH FRONT DOORS				
MUFFLERS	SEE NOTE 6				
FAN BELT	SEE NOTE 6				
BATTERY	THRU RIGHT REAR DOOR				
*GEARBOX FILL & DRAIN	THRU RIGHT REAR DOOR				

*NOTE: EXCLUDING 5. 4L 100KW & 6. 8L 150KW UNITS
REFERENCE OWNERS MANUAL FOR PERIODIC
REPLACEMENT PART LISTINGS

GENERAC POWER SYSTEMS OWNS THE COPYRIGHT OF THIS DRAWING WHICH IS SUPPLIED IN CONFIDENCE AND MUST NOT BE USED FOR ANY PURPOSE OTHER THAN FOR WHICH IT IS SUPPLIED WITHOUT THE EXPRESS WRITTEN CONSENT OF GENERAC POWER SYSTEMS.

© GENERAC POWER SYSTEMS 2001

INSTALLATION DRAWING

5.4L/6.8L

GENERAC POWER
SYSTEMS
Waukesha
P.O. BOX 8
WAUKESHA, WIS. 53187

FILE NAME	OF6289-EWG	SIZE	B
SCALE	1 = 25	FIRST USE	QT SERIES
DWG NO.	OF6289	REV	E

INSTALLATION DRAWING

ISSUE DATE