

# INSTRUCTION SHEET

## PWRview™ System Monitor Setup Guide

### PWRview Overview

PWRview is Generac's system monitoring platform. PWRview provides detailed system statistics and real-time energy production data.

### Setting up PWRview

#### Pre-Registration Checklist

- Verify installation is complete and all devices are enabled.
- Verify Generac PWRcell™ Inverter is powered ON.
- Verify Generac PWRcell Inverter is connected to the Internet. See the Generac PWRcell Inverter Installation Manual for details.
- Verify Internet access via a browser, using a computer or mobile device.

#### Registering the System


**NOTE:** If it is not possible to connect the system to the Internet, call Generac Customer Service at 1-888-GENERAC (1-888-436-3722) to complete registration.

Registering the inverter automatically registers all system components to the system owner's profile.

1. Navigate to <https://register.generac.com/>. If using a mobile device, scan the QR code on your registration label.
2. Choose Sign Up.
3. Create a profile using the system owner's email address.

**NOTE:** Private information cannot be seen by guests viewing the dashboard.

4. Follow the on-screen prompts to complete profile.
5. See **Figure 1**. Remove label (A).

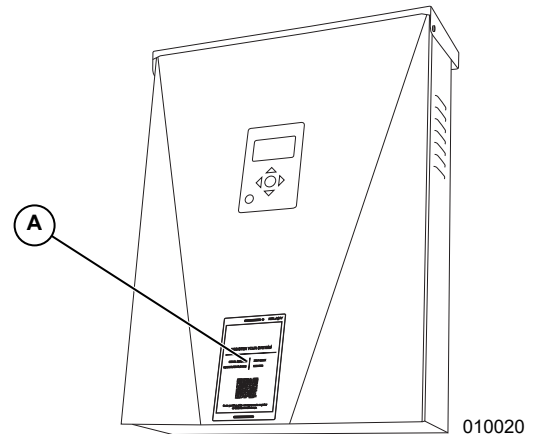

**Figure 1. Inverter Registration Label Location**

6. Place the installation label on the back cover of this document as a permanent record.

#### Accessing PWRview

After registration, PWRview monitor can be accessed via a customer specific URL or the PWRview mobile app.



#### Downloading PWRview

The PWRview app can be downloaded from:



010225

## Inverter Registration Label


After registering your system, place the inverter registration label here.

PEEL AWAY

REGISTER YOUR SYSTEM

SERIAL NUMBER: XXXXX-XXXXX

REGISTRATION CODE: RRRR-RRRR

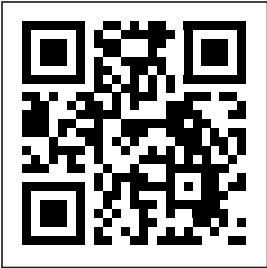

010021

Go to <https://register.generac.com/> to register or scan the code above.

009650