


GROUP G

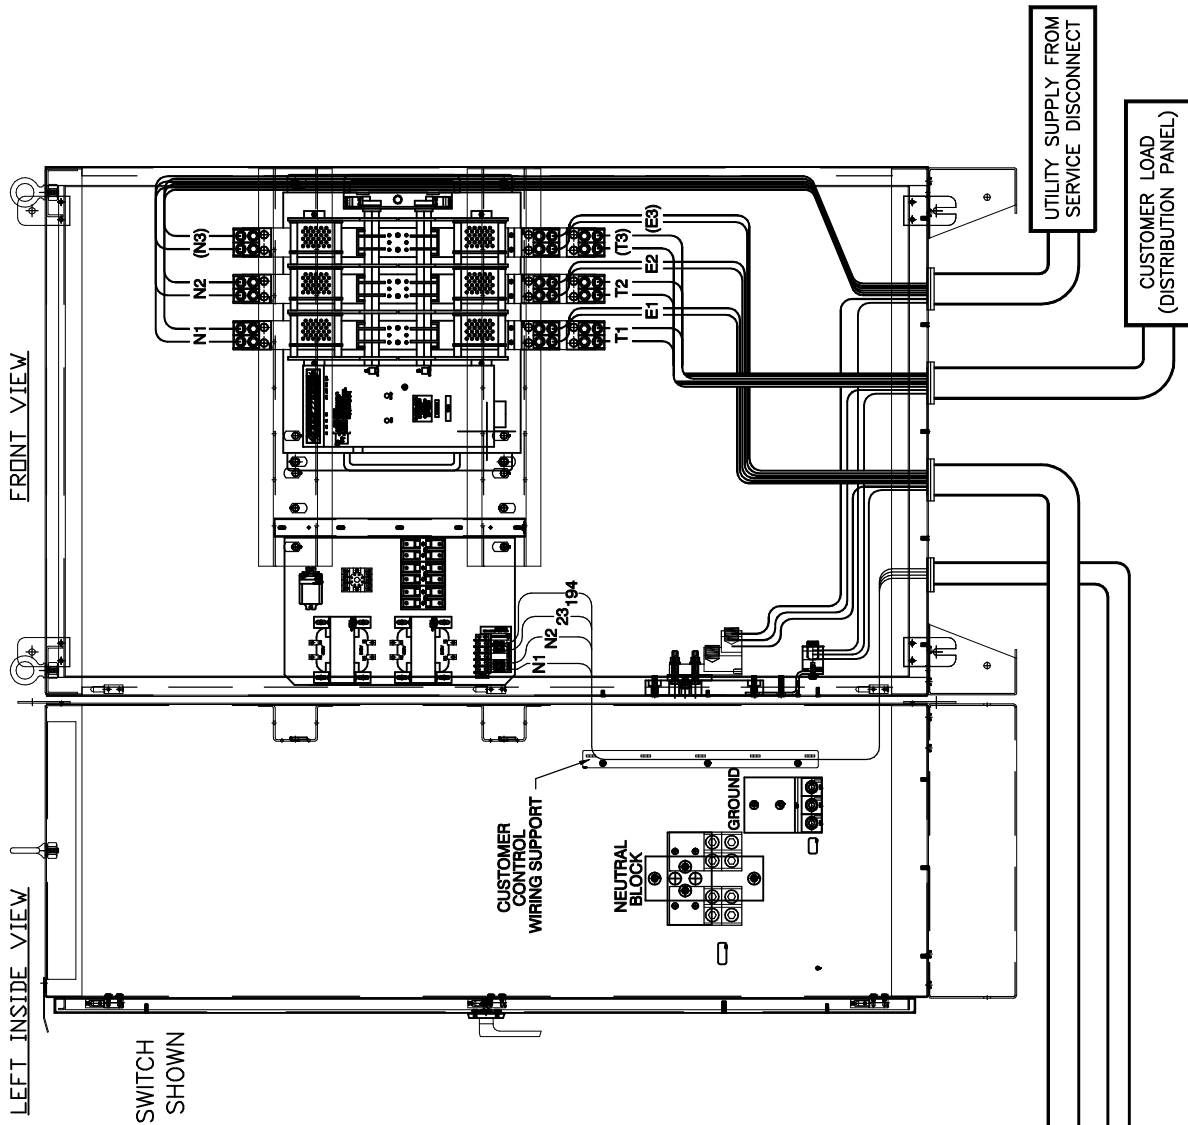

LEFT INSIDE VIEW

FRONT VIEW

RTS TRANSFER SWITCH
800A-3 PHASE SHOWN

QT SERIES ENGINE GENERATOR
CONNECTION PANEL

SINGLE PHASE

NOTE:
MATCH WIRE
NUMBERS TO
TERMINAL NUMBERS

E1 E2

NEUTRAL BLOCK

GROUND

NOTE:
POWER LEADS AND TRANSFER SWITCH CONTROL LEADS
TO BE RUN IN TWO DIFFERENT CONDUITS.

LIQUID COOLED INSTALLATION

UTILITY SUPPLY FROM
SERVICE DISCONNECT

CUSTOMER LOAD
(DISTRIBUTION PANEL)

NOTE:
N3, E3 AND T3 WIRES ARE ONLY
USED ON 3 PHASE SYSTEMS.

EXPLODED VIEW:
INTERCONNECTION DIAGRAM
DRAWING #: 0J0911

EXPLODED VIEW: RTS 600-800A

DRAWING #: 0J0911

APPLICABLE TO:

GROUP G

THIS PAGE IS LEFT INTENTIONALLY BLANK