

PORTABILITY KIT INSTALLATION

PORTABILITY KIT PART NUMBER: 0068294

TOOLS REQUIRED: 10mm and 13mm sockets and ratchets, block(s) of wood (minimum of 6" tall).

WHEEL INSTALLATION

1. Block up the alternator end of generator to install wheel kit.
2. Slide the wheel (**item 12**) onto the axle (**item 13**).
3. Slide axle through the wheel bracket on the carrier, with the offset side of the wheel hub against the wheel bracket.
4. Secure the wheel to the axle with the size 16 washer (**item 14**) and cotter pin (**item 11**).
5. Repeat above instructions for the remaining wheel.

FOOT INSTALLATION


1. Blocking up the engine side of the generator, assemble the foot bracket (**items 6, 8, and 9**) to the carrier (align with holes in tubing) using two M6 x 45 bolts (**item 7**). Thread M6 nuts (**item 10**) to the bolts to secure the assembly.
2. Repeat above instructions for the remaining foot.

HANDLE INSTALLATION


1. Slide M8 x 45 bolt (**item 4**) through handle (**items 1 and 2**) and handle bracket as shown in diagram and secure with M8 nut (**item 5**). Tighten until handle is securely clamped to the carrier.
2. Repeat above instructions for the remaining handle.

LOCKING HANDLE

1. Attach the lanyards (**item 15**) to the release pins (**item 3**) and carrier as shown in the illustration.
2. To lock the handle in the extended position, align the holes in the handle brackets with the holes in the carrier brackets and insert the release pins.

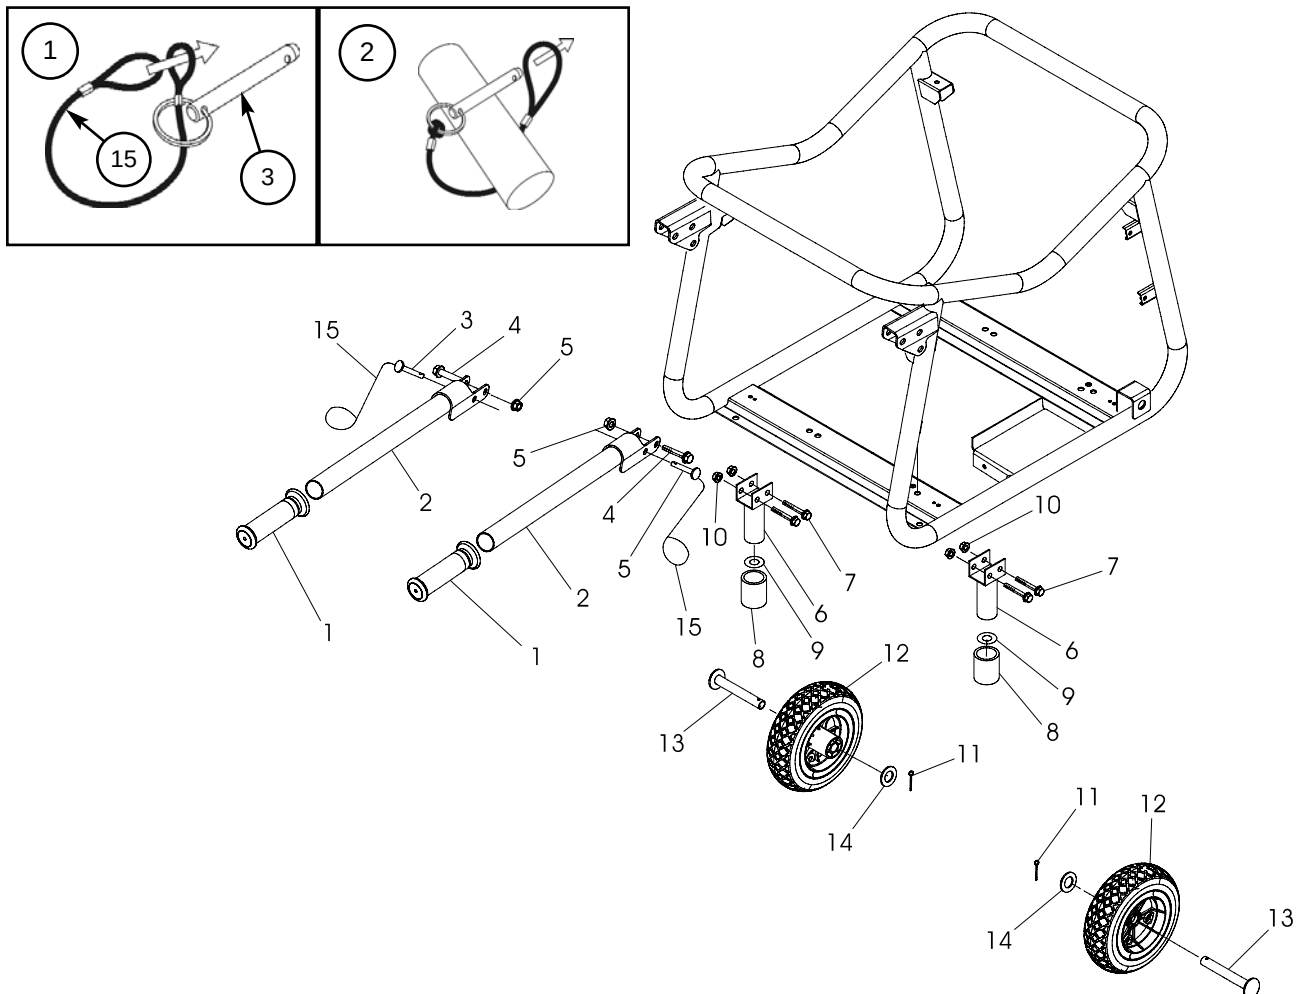

PARTS DRAWING / SCHEMA DES PIÈCES / DIAGRAMA DE PIEZAS - PM0106507

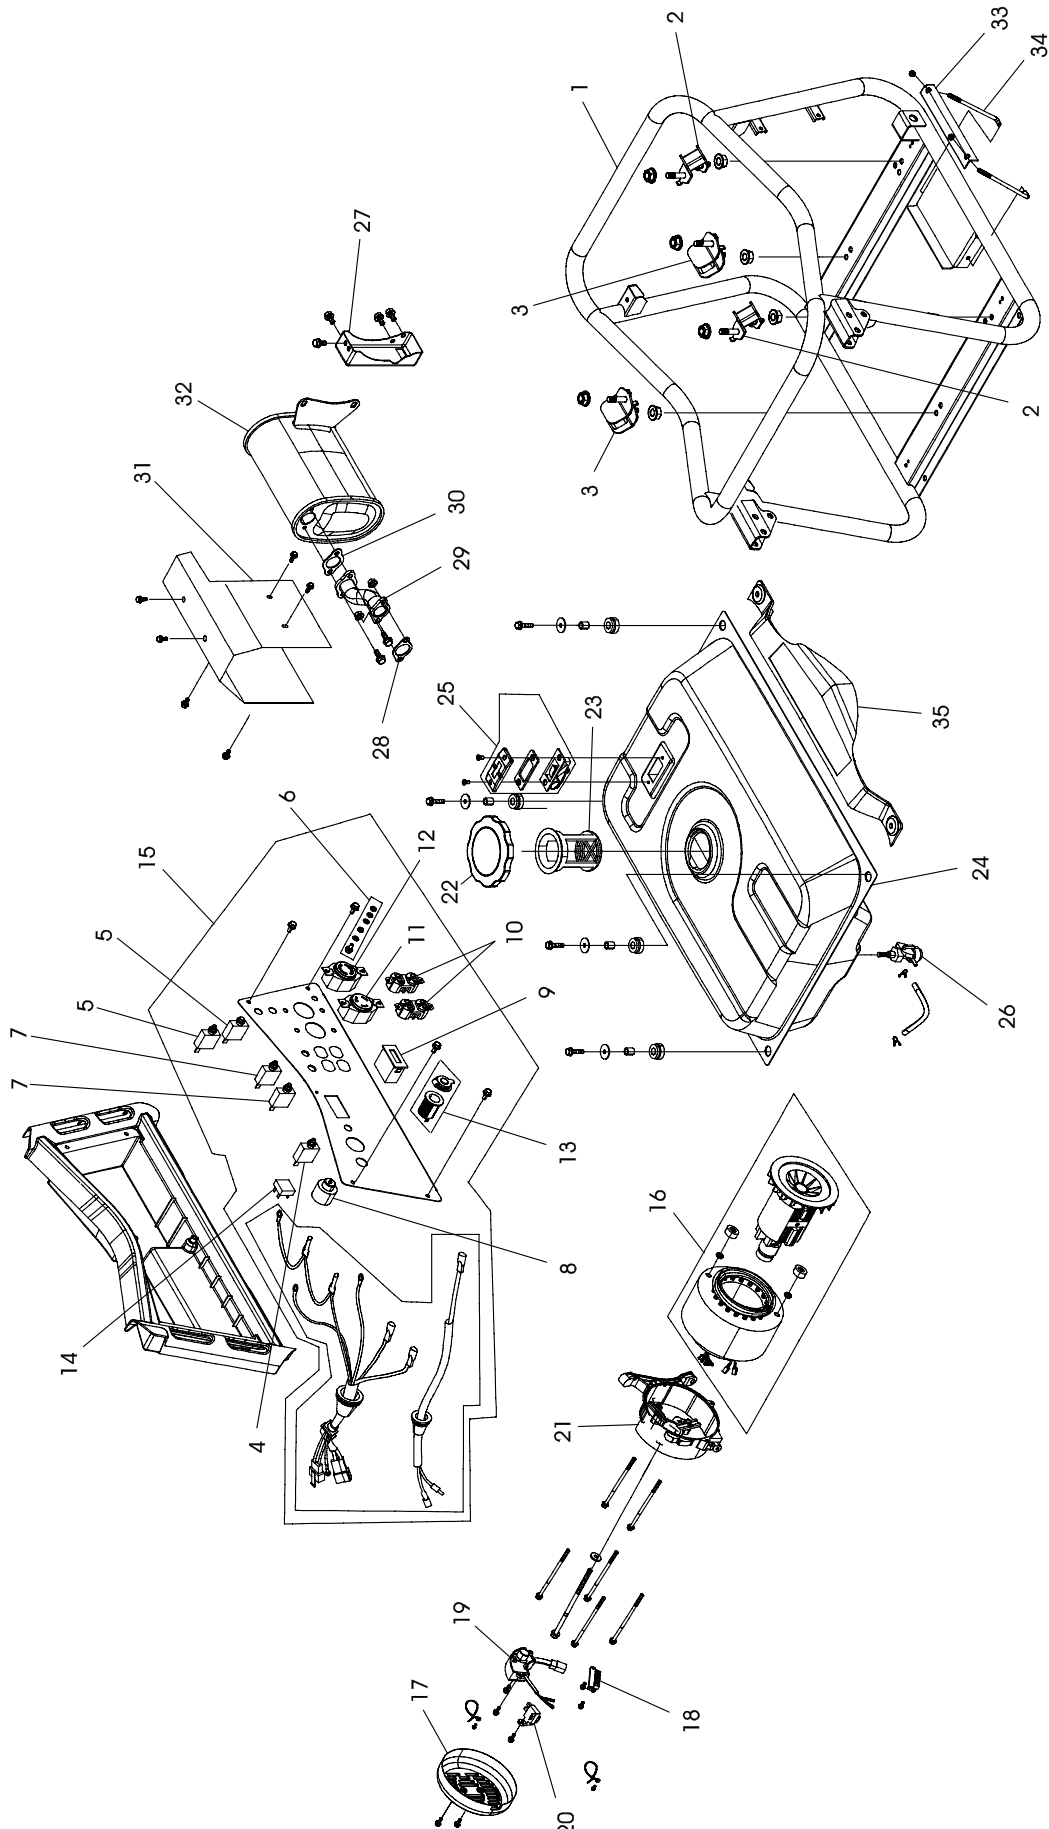

PARTS LIST / LISTE DES PIÈCES / LISTA DE PIEZAS - PM0106507

REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
1	0068519	Frame	Cadre	Marco	1
2	0067208	Isolator left	Sectionneur gauche	Aislador izquierda	2
3	0067209	Isolator right	Sectionneur droite	Aislador derecho	2
4	0068303	Circuit Breaker 10 amp DC	Disjoncteurs 10 amp CC	Cortacircuitos 10 amp CC	1
5	0067788	Circuit Breaker 30 amp	Disjoncteurs 23 amp	Cortacircuitos 23 amp	2
6	0067210	Ground terminal	Borne de mise à terre	Terminal, tierra	1
7	0067787	Circuit Breaker 20 amp	Disjoncteurs 20 amp	Cortacircuitos 20 amp	2
8	0067304	Ignition switch	Interrupteur	Interruptor	1
9	0067128	Hour meter	Horomètre	Contador Horario	1
10	0037762.01	Receptacle 5-20R	Prise 5-20R	Receptáculo 5-20R	2
11	0032565	Receptacle L5-30R	Prise L5-30R	Receptáculo L5-30R	1
12	0049365	Receptacle L14-30R	Prise L14-30R	Receptáculo L14-30R	1
13	0061990	Receptacle DC	Prise CC	Receptáculo CC	1
14	0067405	Rectifier	Redresseur	Rectificador	1
15	0068520	Panel, wired	Tableau complet câblé	Panel, cableado completo	1
16	0068521	Assy, rotor/stator	Ensemble de rotor et stator	Conjunto, rotor y estator	1
17	0068523	Cover, end	Couvercle	Tapa	1
18	0063294	Connection board	Conseil de connexion	Tabla de conexión	1
19	0063290	Voltage regulator	La tension régulatrice	El regulador del voltaje	1
20	0064523	Brush module	Brosser le module	Cepille módulo	1
21	0068522	Support, bearing	Support, roulement	Soporte, Cojinete	1
22	0067143	Fuel cap	Capuchon	Tapa de combustible	1
23	0067227	Fuel filter	Filtre à carburant	Filtro de combustible	1
24	0068299	Fuel tank	Réservoir de carburant	Tanque de metal de combustible	1
25	0068300	Fuel gauge	Jauge de carburant	Indicador de combustible	1
26	0067157	Fuel shut-off	Alimenter d'arrêt	Abastezca de combustible válvula	1
27	0067239	Bracket, metal	Support	Soporte	1
28	0067232	Gasket, exhaust pipe	Joint	Empaquetadera	1
29	0067233	Exhaust pipe	Tuyau d'échappement	Tubo de descarga	1
30	0067234	Gasket, exhaust pipe	Joint	Empaquetadera	1
31	0068297	Cover, muffler	Couvercle	Tapa	1
32	0068664	Muffler	Silencieux	Silenciador	1
33	0068524	Bracket, battery	Support	Soporte	1
34	0068525	Bolt-L	Boulon-L	Perno-L	2
35	0068526	Decorative plate	Plaque décorative	Plato decorativo	1




WARNING: To avoid possible personal injury or equipment damage, a registered electrician or an authorized service representative should perform installation and all service. Under no circumstances should an unqualified person attempt to wire into a utility circuit.



AVERTISSEMENT: Pour éviter toute blessure personnelle ou dommage à l'équipement, l'installation et tout entretien devraient être effectués par un électricien qualifié ou un préposé au service autorisé. En aucun cas, une personne non-qualifiée ne devrait essayer de faire le raccord au circuit principal.



ADVERTENCIA: Para evitar posibles lesiones físicas o daños materiales, es necesario que la instalación y todo el servicio sea realizado por un electricista matriculado o representante de servicio autorizado. Bajo ninguna circunstancia debe permitirse que una persona que no está capacitada trate de manipular cables dentro del circuito de servicio eléctrico.

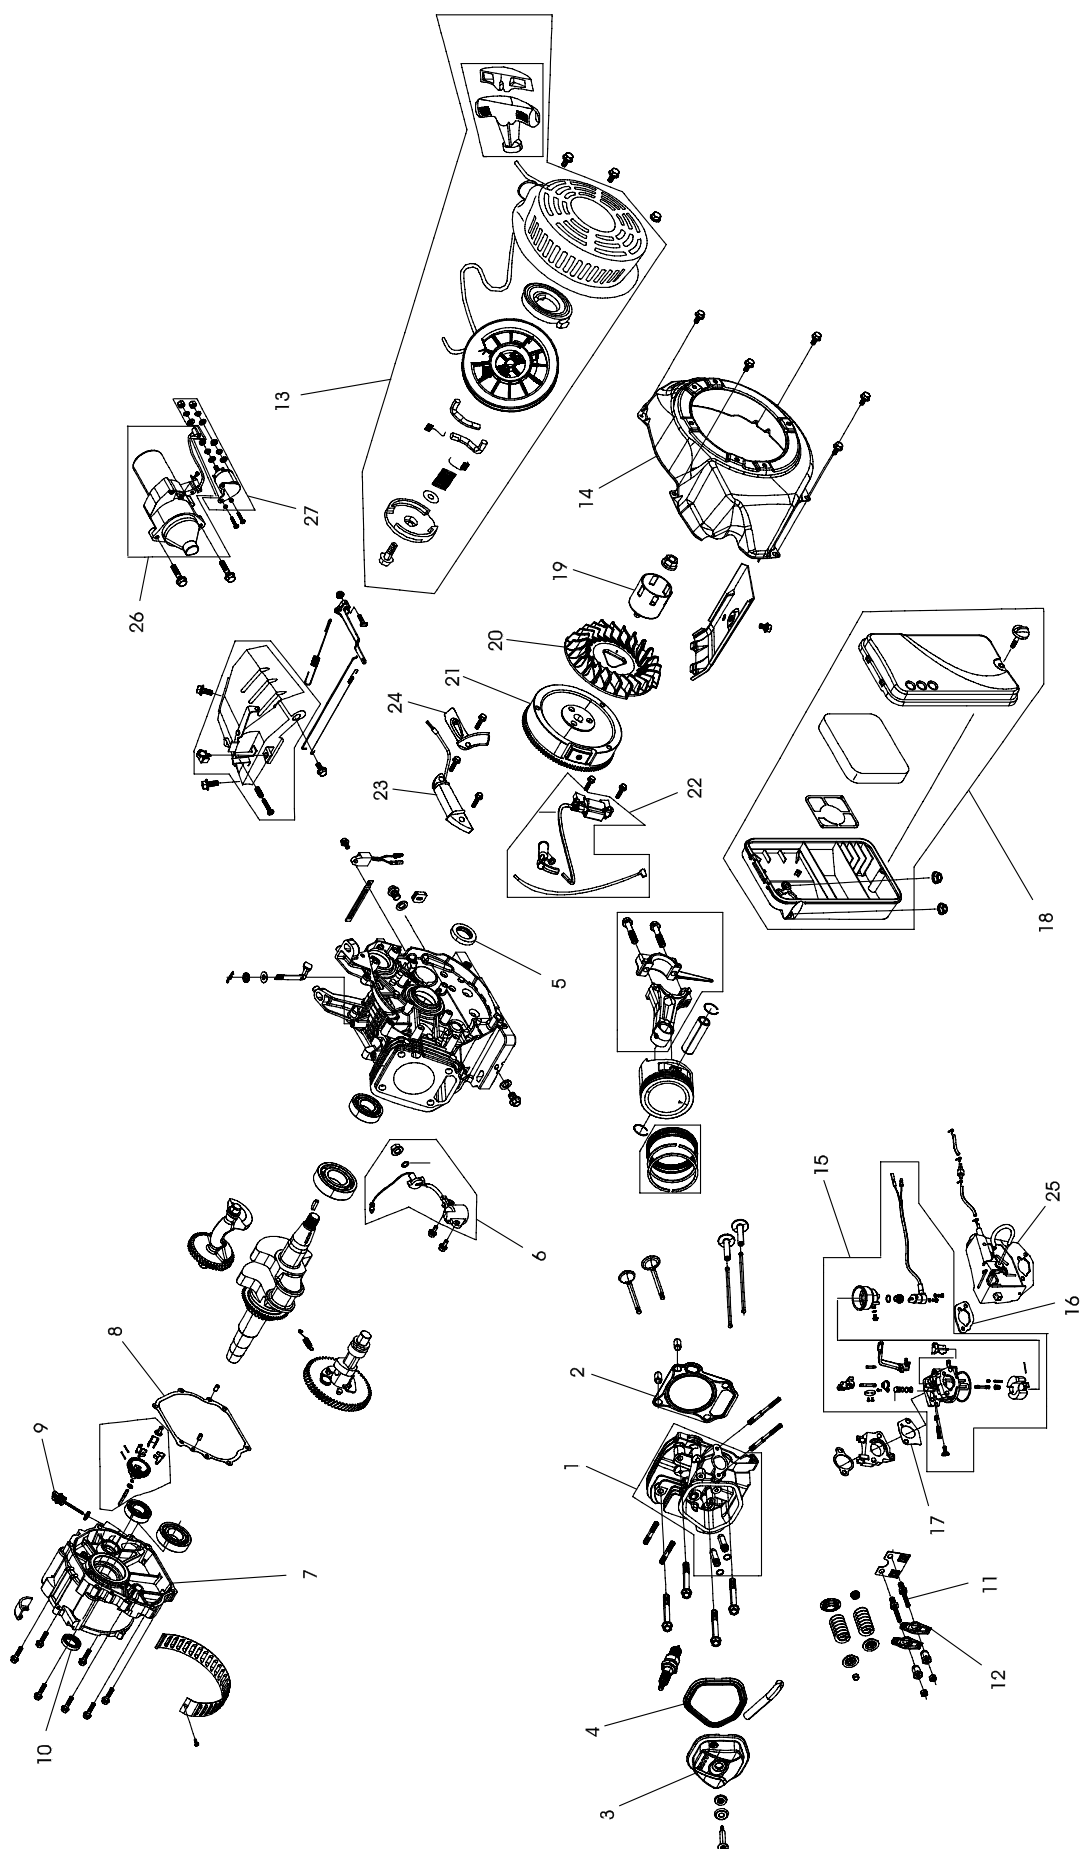

ENGINE PARTS LIST / LISTE DES PIÈCES DU MOTEUR / LISTA DE PIEZAS DEL MOTOR					
REF. NO.	PART NO.	DESCRIPTION	DESCRIPTION	DESCRIPCIÓN	QTY
	0068356	Engine 420 cc	Moteur 420 cc	Motor 420 cc	1
1	0068112	Cylinder head assembly	Ensemble de tete de cylindre	Conjunto de cabezal de cilindro	1
2	0068113	Gasket, cylinder head	Joint	Empaquetadura	1
3	0068114	Cover, cylinder head	Couvercle	Tapa	1
4	0068115	Gasket, cylinder head cover	Joint	Empaquetadura	1
5	0068094	Oil seal	Joint	Sello	1
6	0068117	Sensor, engine oil	Détecteur	Sensor	1
7	0068118	Cover, crankcase	Couvercle	Tapa	1
8	0068119	Gasket, crankcase	Joint	Empaquetadura	1
9	0068098	Oil dipstick	Jauge de niveau d'huile	Varilla de aceite	1
10	0068094	Oil seal	Joint	Sello	1
11	0068122	Bolt, valve adjusting	Boulon	Perno	2
12	0068123	Rocker valve	Soupape	Válvula	2
13	0068512	Engine recoil assembly	Moteur recule l'assemblée	Asamblea de retráctil de motor	1
14	0068513	Shroud	Enveloppe	Guardera	1
15	0068126	Carburetor	Carburateur	Carburador	1
16	0068105	Gasket, air cleaner	Joint	Empaquetadura	1
17	0068106	Gasket, carburetor	Joint	Empaquetadura	1
18	0068129	Air cleaner	Aérer le nettoyeur	Limpiador aéreo	1
19	0068130	Pulley, starter	Poulie de démarreur	Polea de arrancador	1
20	0068131	Fan, flywheel	Ventilateur	Ventilador	1
21	0068132	Flywheel	Volant-moteur	Volante	1
22	0068133	Coil, ignition	Bobine d'allumage	Bobina de encendido	1
23	0068514	Coil, charge	Bobine	Bobina	1
24	0068515	Clamp, charge coil	Collier	Abrazadera	1
25	0068516	Control assembly, choke	L'assemblée de contrôle de buse	Conjunto de control de ahogador	1
26	0068134	Motor, starter	Moteur de démarreur	Motor de arranque	1
27	0068517	Relay, starter	Relais de démarreur	Relevador de arranque	1