


Technical Manual

RTS Automatic Transfer Switch

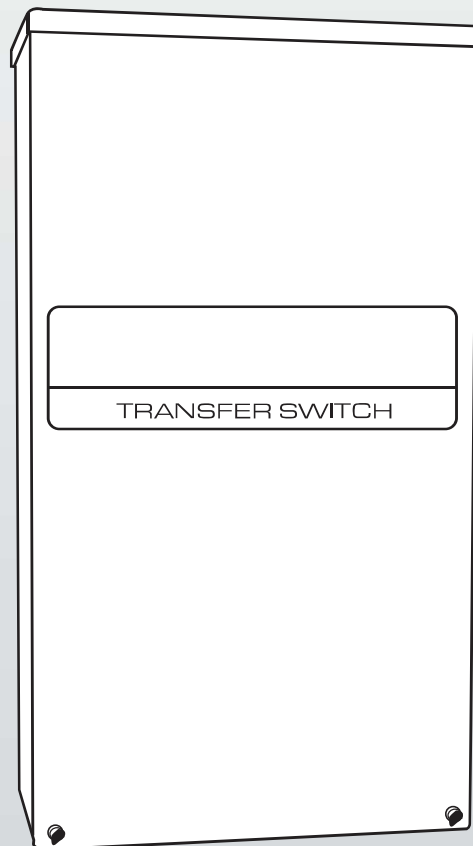

This manual should remain with the unit.

Safety Rules

! **SAVE THESE INSTRUCTIONS!** Read the following information carefully before attempting to install, operate or service this equipment. Also read the instructions and information on tags, decals, and labels that may be affixed to the transfer switch. Replace any decal or label that is no longer legible.

! **DANGER!** Connection of a generator to an electrical system normally supplied by an electric utility shall be by means of suitable transfer equipment so as to isolate the electric system from utility distribution system when the generator is operating (Article 701 Legally Required Standby Systems or Article 702 Optional Standby Systems, as applicable). Failure to isolate electric system by these means may result in damage to generator and may result in injury or death to utility workers due to backfeed of electrical energy.

The manufacturer cannot anticipate every possible circumstance that might involve a hazard. The warnings in this manual, and on tags and decals affixed to the unit are, therefore, not all-inclusive. If using a procedure, work method or operating technique the manufacturer does not specifically recommend, ensure that it is safe for others. Also make sure the procedure, work method or operating technique chosen does not render the transfer switch unsafe.

Throughout this publication, and on tags and decals affixed to the generator, DANGER, WARNING, CAUTION and NOTE blocks are used to alert personnel to special instructions about a particular operation that may be hazardous if performed incorrectly or carelessly. Observe them carefully. Their definitions are as follows:

! DANGER!

After this heading, read instructions that, if not strictly complied with, will result in serious personal injury, including death.

! WARNING!

After this heading, read instructions that, if not strictly complied with, could result in serious personal injury, including death.

! CAUTION!

After this heading, read instructions that, if not strictly complied with, might result in minor or moderate injury.

NOTE:

After this heading, read instructions that, if not strictly complied with, may result in damage to equipment and/or property.

These safety warnings cannot eliminate the hazards that they indicate. Common sense and strict compliance with the special instructions while performing the service are essential to preventing accidents.

Four commonly used safety symbols accompany the DANGER, WARNING and CAUTION blocks. The type of information each indicates follows:

! This symbol points out important safety information that, if not followed, could endanger personal safety and/or property.

 This symbol points out potential explosion hazard.

 This symbol points out potential fire hazard.

 This symbol points out potential electrical shock hazard.

GENERAL HAZARDS

- Any AC generator that is used for backup power if a NORMAL (UTILITY) power source failure occurs, must be isolated from the NORMAL (UTILITY) power source by means of an approved transfer switch. Failure to properly isolate the NORMAL and STANDBY power sources from each other may result in injury or death to electric utility workers, due to backfeed of electrical energy.
- Improper or unauthorized installation, operation, service or repair of the equipment is extremely dangerous and may result in death, serious personal injury, or damage to equipment and/or personal property.
- Extremely high and dangerous power voltages are present inside an installed transfer switch. Any contact with high voltage terminals, contacts or wires will result in extremely hazardous, and possibly LETHAL, electric shock. DO NOT WORK ON THE TRANSFER SWITCH UNTIL ALL POWER VOLTAGE SUPPLIES TO THE SWITCH HAVE BEEN POSITIVELY TURNED OFF.
- Competent, qualified personnel should install, operate and service this equipment. Adhere strictly to local, state and national electrical and building codes. When using this equipment, comply with regulations the National Electrical Code (NEC), CSA Standard; C22.1 Canadian Electric Code and Occupational Safety and Health Administration (OSHA) have established.
- Never handle any kind of electrical device while standing in water, while barefoot, or while hands or feet are wet. DANGEROUS ELECTRICAL SHOCK MAY RESULT.
- Remove all jewelry (such as rings, watches, bracelets, etc.) before working on this equipment.

- If work must be done on this equipment while standing on metal or concrete, place insulative mats over a dry wood platform. Work on this equipment only while standing on such insulative mats.
- Never work on this equipment while physically or mentally fatigued.
- Keep the transfer switch enclosure door closed and bolted at all times. Only qualified personnel should be permitted access to the switch interior.
- In case of an accident caused by electric shock, immediately shut down the source of electrical power. If this is not possible, attempt to free the victim from the live conductor but **AVOID DIRECT CONTACT WITH THE VICTIM**. Use a nonconducting implement, such as a dry rope or board, to free the victim from the live conductor. If the victim is unconscious, apply first aid and get immediate medical help.
- When an automatic transfer switch is installed for a standby generator set, the generator engine may crank and start at any time without warning. To avoid possible injury that might be caused by such sudden start-ups, the system's automatic start circuit must be disabled before working on or around the generator or transfer switch. Then place a "DO NOT OPERATE" tag on the transfer switch and on the generator. Remove the Negative (Neg) or (–) battery cable.

Safety Rules	Inside Front Cover
General Information	2
1.1 Introduction	2
1.2 Unpacking	2
1.3 Equipment Description	2
1.3.1 Transfer Switch Mechanism	2
1.3.2 Utility Service Disconnect Circuit Breaker	2
1.3.3 Load Shed Module (LSM)	2
1.4 Transfer Switch Data Decal	3
1.5 Transfer Switch Enclosure	3
1.6 Safe Use Of Transfer Switch	3
Installation	3
2.1 Introduction to Installation	3
2.2 Mounting	3
2.3 Connecting Power Source and Load Lines	4
2.4 Connecting Start Circuit Wires	4
2.5 Connecting Load Shed Module (LSM) Connection	4
2.5.1 Sequence of Operation	4
Operation	6
3.1 Functional Tests & Adjustments	6
3.2 Manual Operation	6
3.2.1 Close to Utility Source Side	6
3.2.2 Close to Generator Source Side	6
3.2.3 Return to Utility Source Side	6
3.3 Voltage Checks	6
3.4 Generator Tests Under Load	8
3.5 Testing Load Shed Module (LSM)	8
Notes	9
Installation Diagrams	11
Electrical Data	14
Exploded Views & Parts Lists	18

**For authorized service,
reference the dealer locator
number found inside the
generator owner's manual.**

CALIFORNIA PROPOSITION 65 WARNING

Engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.

CALIFORNIA PROPOSITION 65 WARNING

This product contains or emits chemicals known to the State of California to cause cancer, birth defects and other reproductive harm.

General Information

1.1 INTRODUCTION

This manual has been prepared especially for the purpose of familiarizing personnel with the design, application, installation, operation and servicing of the applicable equipment. Read the manual carefully and comply with all instructions. This will help to prevent accidents or damage to equipment that might otherwise be caused by carelessness, incorrect application, or improper procedures.

Every effort has been expended to make sure that the contents of this manual are both accurate and current. The manufacturer, however, reserves the right to change, alter or otherwise improve the product at any time without prior notice.

1.2 UNPACKING

Carefully unpack the transfer switch. Inspect closely for any damage that might have occurred during shipment. The purchaser must file with the carrier any claims for loss or damage incurred while in transit.

Check that all packing material is completely removed from the switch prior to installation.

1.3 EQUIPMENT DESCRIPTION

The automatic transfer switch is used for transferring electrical load from a UTILITY (NORMAL) power source to an GENERATOR (STANDBY) power source. Such a transfer of electrical loads occurs automatically when the UTILITY power source has failed or is substantially reduced and the GENERATOR source voltage and frequency have reached an acceptable level. The transfer switch prevents electrical feedback between two different power sources (such as the UTILITY and GENERATOR sources) and, for that reason, codes require it in all standby electric system installations.

The transfer switch consists of a transfer mechanism, UTILITY SERVICE DISCONNECT circuit breaker, a relay control, fuses, terminal strip, and fuse holder for connection of sensing wires.

This transfer switch is suitable for use as service equipment.

1.3.1 TRANSFER SWITCH MECHANISM

These switches (Figure 1.1) are used with a single-phase system, when the single-phase NEUTRAL line is to be connected to a Neutral Lug and is not to be switched.

Solderless, screw-type terminal lugs are standard.


Switch	Wire	Conductor Tightening
Rating	Range	Torque
100A	#14-1/0 AWG	50 in-lbs.
200A	#6-250 MCM	275 in-lbs.

This transfer switch is suitable for control of motors, electric discharge lamps, tungsten filament and electric heating equipment where the sum of motor full load ampere ratings and the ampere ratings of other loads do not exceed the ampere rating of the switch and the tungsten load does not exceed 30 percent of the switch rating.

This UL listed transfer switch is for use in optional standby systems only (NEC article 702).

This transfer switch is suitable for use on a circuit capable of 22,000 rms (200A) and 10,000 (100A) symmetrical amperes, 240 VAC maximum.

Figure 1.1 — Typical ATS Transfer Mechanism

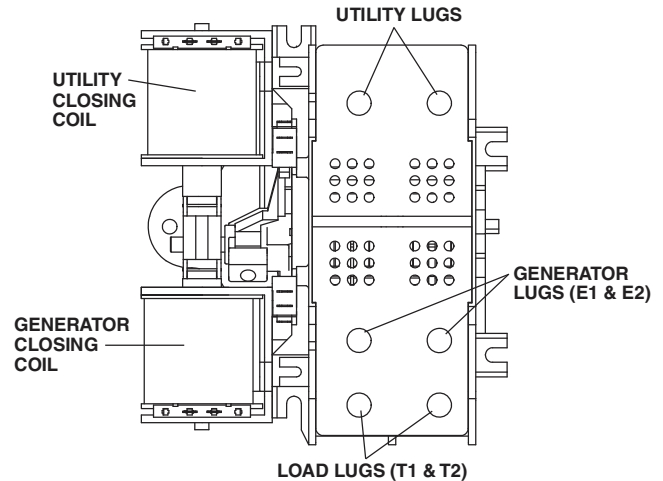

1.3.2 UTILITY SERVICE DISCONNECT CIRCUIT BREAKER

The utility service and generator disconnect circuit breakers for the 100 amp models are:

- Type BQ, 2-pole
- 120/240VAC, 100A
- 50/60 Hertz
- Heating, Air Conditioning and Refrigeration (HACR) rated
- Wire range: #1 - #8 AWG.
- The conductor tightening torque is 50 in-lbs.

The utility service circuit breaker for the 150/200 amp models are:

- Type 225AF, 2-pole
- 120/240VAC, 150A/200A
- 50/60 Hertz
- Wire range: 300 MCM - 6 STR (Line), 250 MCM - 6 STR (Load - ATS)
- The conductor tightening torque is 375 in-lbs. (Line), 275 in-lbs. (Load - ATS)

1.3.3 LOAD SHED MODULE (LSM)


The Load Shed module is designed to prevent an overload on the generator when it is supplying the customer loads (see Figure 1.2). Up to six loads can be managed by the LSM; 2 air conditioner loads and 4 other loads. The LSM manages the loads by “shedding” the connected loads in the event of a drop in generator frequency (overload). Loads to be “shed” are grouped in 4 priority levels on the LSM.

- Priority 1 and 2 has connections for both one air conditioner and one contactor. Both an air conditioner and a contactor can be used at the same time if desired. To control an air conditioner, no additional equipment is required. Internal relays interrupt the thermostat 24VAC control signal to disable the air conditioner load.

- Priority 3 and 4 have connections for one contactor only.
- Four LEDs, located on the load shed module, will indicate when a load priority level is enabled.
- Any loads, including central air conditioners, can be controlled via a contactor that must be purchased separately. Up to four contactors can be controlled by the load shed module. The LSM supplies the 120 Vac to energize each contactor coil.
- Generator overload condition is determined by generator frequency. Loads are shed when the frequency is <58Hz for 3 seconds or <50Hz for ½ Second (For 60Hz).

The LSM has a Test button which forces the unit to act as if an overload has occurred. This button operates even when the transfer signal is inactive.

Figure 1.2 — Load Shed Module

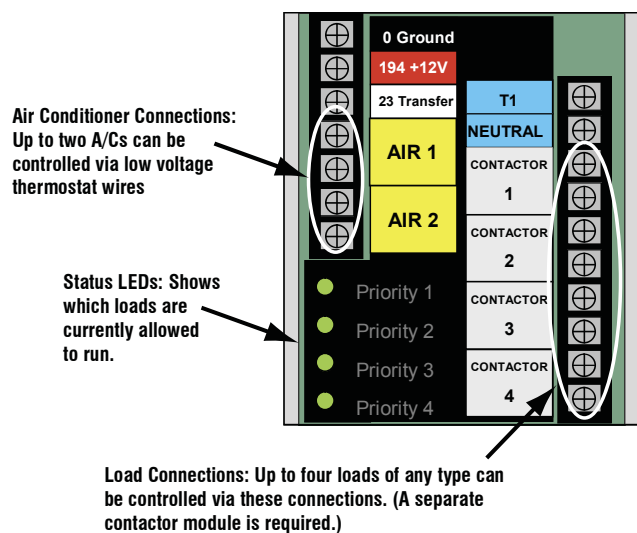

1.4 TRANSFER SWITCH DATA DECAL

A DATA DECAL is permanently affixed to the transfer switch enclosure. Use this transfer switch only with the specific limits shown on the DATA DECAL and on other decals and labels that may be affixed to the switch. This will prevent damage to equipment and property.

When requesting information or ordering parts for this equipment, make sure to include all information from the DATA DECAL.

Record the Model and Serial numbers in the space provided below for future reference.

MODEL #	
SERIAL #	

1.5 TRANSFER SWITCH ENCLOSURE

The standard switch enclosure is a National Electrical Manufacturer’s Association (NEMA) and UL 3R type. UL and NEMA 3R type enclosures primarily provide a degree of protection against falling rain and sleet; undamaged by the formation of ice on the enclosure.

1.6 SAFE USE OF TRANSFER SWITCH

Before installing, operating or servicing this equipment, read the SAFETY RULES (inside front cover) carefully. Comply strictly with all SAFETY RULES to prevent accidents and/or damage to the equipment. The manufacturer recommends that a copy of the SAFETY RULES are posted near the transfer switch. Also, be sure to read all instructions and information found on tags, labels and decals affixed to the equipment.

Three publications that outline the safe use of transfer switches are the following:

- NFPA 70; National Electrical Code
- NFPA 70E; Standard for Electrical Safety in the Workplace
- UL 1008, STANDARD FOR SAFETY-AUTOMATIC TRANSFER SWITCHES

NOTE:

It is essential to use the latest version of any standard to ensure correct and current information.

2.1 INTRODUCTION TO INSTALLATION

This equipment has been wired and tested at the factory. Installing the switch includes the following procedures:

- Mounting the enclosure.
- Connecting power source leads and load leads.
- Connecting the generator sensing and transfer relay circuits.
- Connecting any auxiliary contact (if needed)
- Connect load shed module loads (as required)
- Testing functions.

2.2 MOUNTING

Mounting dimensions for the transfer switch enclosure are in this manual. Enclosures are typically wall-mounted. See “Installation Diagram”.

▲ CAUTION!

! Handle transfer switches carefully when installing. Do not drop the switch. Protect the switch against impact at all times, and against construction grit and metal chips. Never install a transfer switch that has been damaged.

This transfer switch is mounted in a UL type 3R enclosure. It can be mounted outside or inside and should be based on the layout of installation, convenience and proximity to the utility supply and load center.

Installation

Install the transfer switch as close as possible to the electrical loads that are to be connected to it. Mount the switch vertically to a rigid supporting structure. To prevent switch distortion, level all mounting points. If necessary, use washers behind mounting holes to level the unit.

2.3 CONNECTING POWER SOURCE AND LOAD LINES

⚠ DANGER!

⚠ Make sure to turn OFF both the UTILITY (NORMAL) and GENERATOR (STANDBY) power supplies before trying to connect power source and load lines to the transfer switch. Supply voltages are extremely high and dangerous. Contact with such high voltage power supply lines causes extremely hazardous, possibly lethal, electrical shock.

Wiring diagrams and electrical schematics are provided in this manual.

NOTE:

All installations must comply with national, state and local codes. It is the responsibility of the installer to perform an installation that will pass the final electrical inspection.

The utility supply connection is made at the UTILITY SERVICE DISCONNECT circuit breaker terminals. The generator and customer load connections are made at the transfer switch mechanism, inside the switch enclosure.

Conductor sizes must be adequate to handle the maximum current to which they will be subjected, based on the 75°C column of tables, charts, etc. used to size conductors. The installation must comply fully with all applicable codes, standards and regulations.

All power cables must enter the enclosure through the knockouts provided. If not using the knockouts, conduit entry into the enclosure must be at or below knockouts to maintain the Type 3R rating. Conduits should be arranged to provide separation between the Utility and Generator supply conductors inside the enclosure.

Before connecting wiring cables to terminals, remove any surface oxides from the cable ends with a wire brush. If ALUMINUM conductors are used, apply corrosion inhibitor to conductors. Tighten terminal lugs to the torque values on "Utility Service Disconnect Circuit Breaker", and on the decal located on the inside of the door. After tightening terminal lugs, carefully wipe away any excess corrosion inhibitor.

⚠ CAUTION!

⚠ Use a torque wrench to tighten the conductors, being sure not to overtighten, or damage to the switch base could occur. If not tightened enough, a loose connection would result, causing excess heat which could damage the switch base.

Connect power source load conductors to clearly marked transfer mechanism terminal lugs as follows

1. Connect UTILITY (NORMAL) power source cables to UTILITY SERVICE DISCONNECT circuit breaker.
 2. Connect the GENERATOR (STANDBY) source power cables to switch terminals E1, E2.
 3. Connect customer LOAD leads to switch terminals T1, T2.
- Conductors must be properly supported, of approved insulative qualities, protected by approved conduit, and of the correct wire gauge size in accordance with applicable codes.

Be sure to maintain proper electrical clearance between live metal parts and grounded metal. Allow at least 1/2 inch for 100-400 amp circuits.

2.4 CONNECTING START CIRCUIT WIRES

Control system interconnections (Electrical Data section) consist of UTILITY 1 (N1), UTILITY 2 (N2) and LOAD (T1), and leads 23, 0 and 194. Recommended wire gauge sizes for this wiring depends on the length of the wire, as recommended in the following chart:

MAXIMUM WIRE LENGTH	RECOMMENDED WIRE SIZE
460 feet (140m)	No. 18 AWG.
461 to 730 feet (223m)	No. 16 AWG.
731 to 1,160 feet (354m)	No. 14 AWG.
1,161 to 1,850 feet (565m)	No. 12 AWG.

2.5 CONNECTING LOAD SHED MODULE (LSM) CONNECTION

The LSM can control an air conditioner (24 Vac) directly or a separate contactor (120 Vac) which can control any load connected to it. See Figure 2.1.


2.5.1 SEQUENCE OF OPERATION

The 4 green status LEDs will indicate when a load priority level is enabled.

- All loads are enabled when the transfer signal is off. (ATS in Utility position).
- If the transfer signal is pulled low (Active)
 - All loads are enabled until an overload is detected
 - When an overload is detected all loads are disabled
 - After 5 minutes priority 1 loads are enabled.
 - After another 30 seconds priority 2 loads are enabled
 - After another 30 seconds priority 3 loads are enabled
 - After another 30 seconds priority 4 loads are enabled

If an overload is detected within 30 seconds of a level being enabled, all loads are disabled again and the sequence repeats. However, the level that caused the overload and all levels higher will not be enabled again for 30 minutes.

Figure 2.1 — Load Shed Module Connections

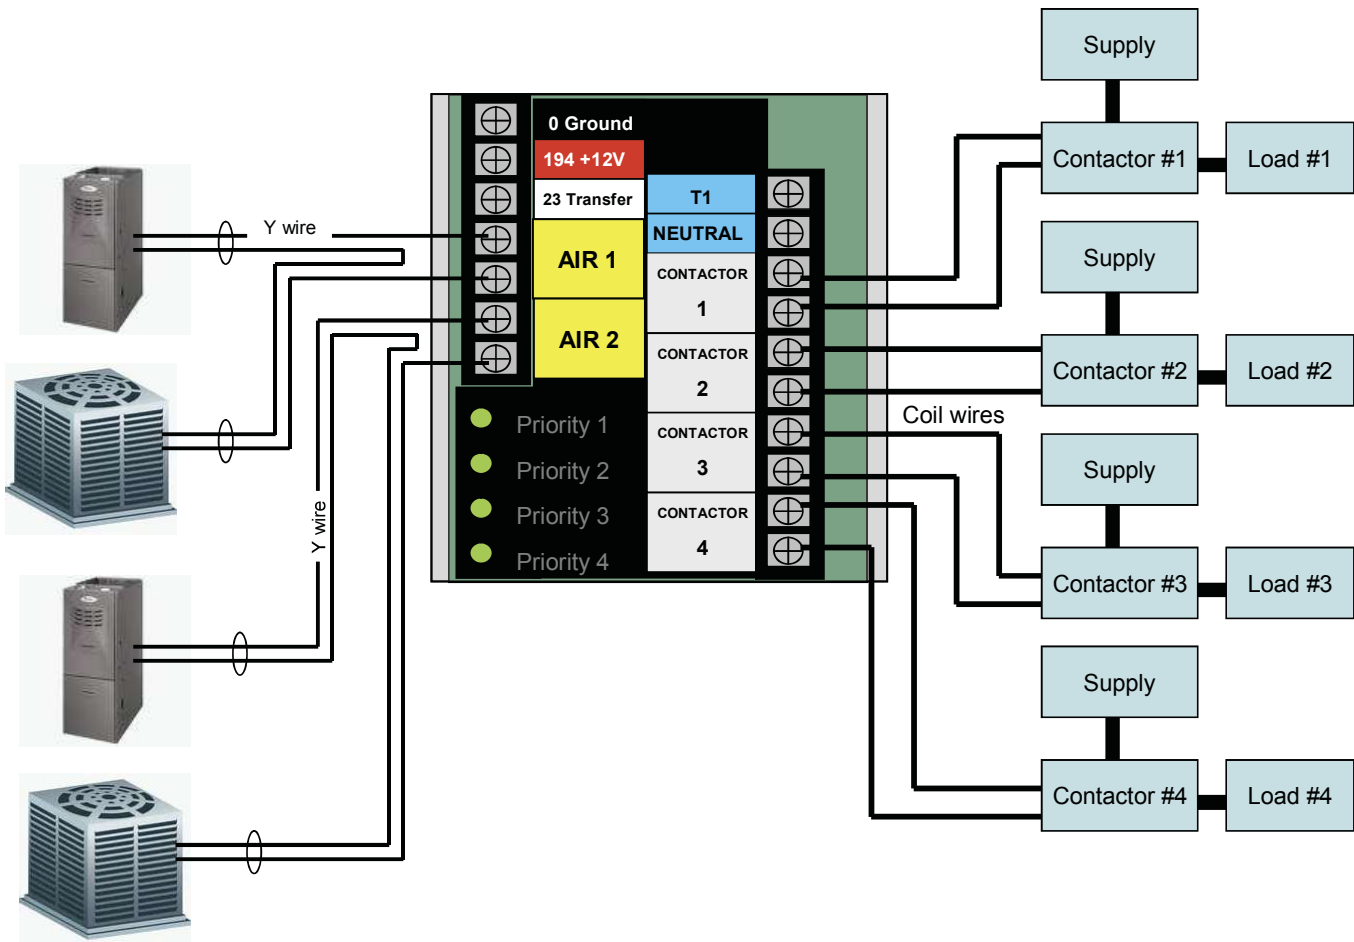

Control of Air Conditioner Load

1. Route the thermostat cable (from the furnace to the outdoor air conditioner unit) to the transfer switch.
2. Connect the wire to the terminal strip terminals (Air 1) on the LSM as shown in Figure 2.2. These are normally closed contacts which open upon load shed conditions. Route thermostat wire away from High voltage wires.
3. If required, connect the second air conditioner to the terminal strip terminals (Air 2).

Contact Ratings	
Air 1 & 2	24 VAC, 5.0 Amps Max

NOTE:

These instructions are for a typical air conditioner installation. Control of heat pump and 2-stage air conditioners will require special connections.

Control of a Separate Contactor

A separate contactor relay module can be purchased from the manufacturer. If a different relay is used it must have a 120 Vac coil voltage. The LSM supplies a fused (5A) 120 Vac to energize the coils of the relay contactors (L1, L2, L3 and L4).

1. Mount the contactor module and connect the load to the main contacts.
2. Connect the contactor coil to the desired LSM L1-L4 terminals on the terminal strip.
3. Connect additional load shedding contactors in a similar fashion.

NOTE:

It will be necessary to determine the order of “shedding” the connected loads and connect the loads to the LSM in that order. One is the highest priority and four is the lowest priority.

3.1 FUNCTIONAL TESTS AND ADJUSTMENTS

Following transfer switch installation and interconnection, inspect the entire installation carefully. A competent, qualified electrician should inspect it. The installation should comply strictly with all applicable codes, standards, and regulations. When absolutely certain the installation is proper and correct, complete a functional test of the system.

⚠ CAUTION!

! Perform functional tests in the exact order presented in this manual, or damage could be done to the switch.

IMPORTANT: Before proceeding with functional tests, read and make sure all instructions and information in this section are understood. Also read the information and instructions of labels and decals affixed to the switch. Note any options or accessories that might be installed and review their operation.

3.2 MANUAL OPERATION

⚠ DANGER!

! Do NOT manually transfer under load. Disconnect transfer switch from all power sources by approved means, such as the main circuit breaker(s).

A manual HANDLE is shipped with the transfer switch. Manual operation must be checked BEFORE the transfer switch is operated electrically. To check manual operation, proceed as follows:

1. Turn the generator's AUTO/OFF/MANUAL switch to OFF.
2. Turn OFF both UTILITY (service disconnect circuit breaker) and GENERATOR (generator main line circuit breaker) power supplies to the transfer switch.
3. Note position of transfer mechanism main contacts by observing the moveable contact carrier arm. This can be viewed through the long narrow slot in the inside cover of the ATS. The top of the moveable contact carrier arm is yellow to be easily identified.
 - Manual operation handle in the UP position - LOAD terminals (T1, T2) are connected to UTILITY terminals (N1, N2).
 - Manual operation handle in the DOWN position - LOAD terminals (T1, T2) are connected to EMERGENCY terminals (E1, E2).

⚠ CAUTION!

! Do not use excessive force when operating the transfer switch manually or damage could be done to the manual handle.

3.2.1 CLOSE TO UTILITY SOURCE SIDE

Before proceeding, verify the position of the switch by observing the position of manual operation handle in Figure 3.1. If the handle is UP, the contacts are closed in the NORMAL (UTILITY) position, no further action is required. If the handle is DOWN, proceed with Step 1.

Step 1: With the handle inserted into the moveable contact carrier arm, move handle UP. Be sure to hold on to the handle as it will move quickly after the center of travel.

Step 2: Remove manual operating handle from moveable contact carrier arm. Return handle to storage bracket.

3.2.2 CLOSE TO GENERATOR SOURCE SIDE

Before proceeding, verify the position of the switch by observing the position of the manual operation handle in Figure 3.1. If the handle is DOWN, the contacts are closed in the GENERATOR (STANDBY) position. No further action is required. If the handle is UP, proceed with Step 1.

Step 1: With the handle inserted into the moveable contact carrier arm, move the handle DOWN. Be sure to hold on to the handle as it will move quickly after the center of travel.

Step 2: Remove manual operating handle from moveable contact carrier arm. Return handle to storage bracket.

3.2.3 RETURN TO UTILITY SOURCE SIDE

Step 1: Manually actuate switch to return manual operating handle to the UP position.

Step 2: Remove manual operating handle from moveable contact carrier arm. Return handle to storage bracket.

3.3 VOLTAGE CHECKS

1. Turn ON the UTILITY power supply to the transfer switch using the UTILITY SERVICE DISCONNECT circuit breaker.


⚠ DANGER!

⚡ PROCEED WITH CAUTION. THE TRANSFER SWITCH IS NOW ELECTRICALLY HOT. CONTACT WITH LIVE TERMINALS RESULTS IN EXTREMELY HAZARDOUS AND POSSIBLY FATAL ELECTRICAL SHOCK.


2. With an accurate AC voltmeter, check for correct voltage. Measure across ATS terminal lugs N1 and N2. Also check N1 to NEUTRAL and N2 to NEUTRAL.
3. When certain that UTILITY supply voltage is correct and compatible with transfer switch ratings, turn OFF the UTILITY supply to the transfer switch.
4. On the generator panel, set the AUTO/OFF/ MANUAL switch to MANUAL position. The generator should crank and start.
5. Let the generator stabilize and warm up at no-load for at least five minutes.
6. Set the generator's main circuit breaker (CB1) to its ON or CLOSED position.

Figure 3.1 — Actuating Transfer Switch

Attach handle to actuating shaft.

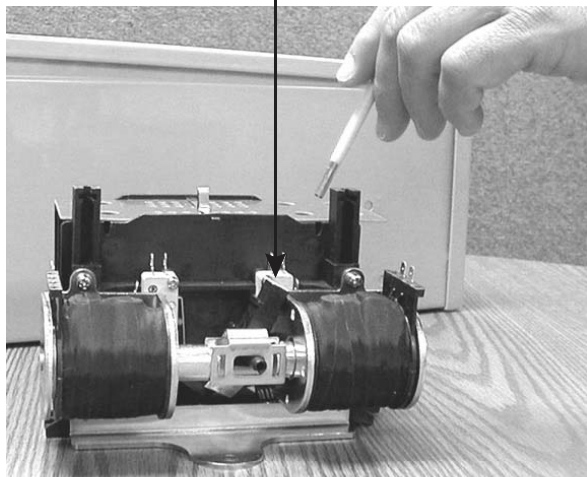

NOTE: Return handle to storage position in enclosure when finished with manual transfer.

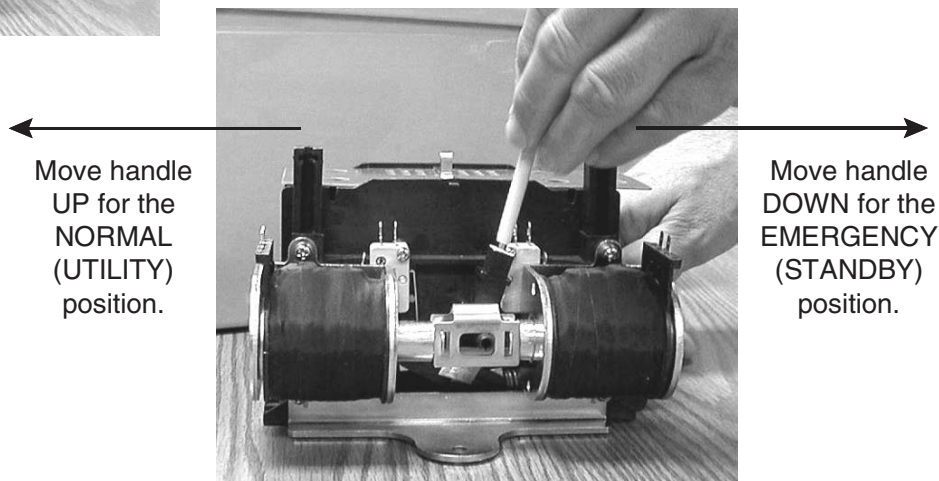

Move handle UP for the NORMAL (UTILITY) position.

Move handle DOWN for the EMERGENCY (STANDBY) position.

⚠ DANGER!

⚠ PROCEED WITH CAUTION. GENERATOR OUTPUT VOLTAGE IS NOW BEING DELIVERED TO TRANSFER SWITCH TERMINALS. CONTACT WITH LIVE TERMINALS RESULTS IN EXTREMELY DANGEROUS AND POSSIBLY FATAL ELECTRICAL SHOCK.

7. With an accurate AC voltmeter and frequency meter, check the no-load, voltage and frequency. Measure across ATS terminal lugs E1 to E2. Also check E1 to NEUTRAL and E2 to NEUTRAL.
 - a. Frequency.....60-62 Hertz
 - b. Terminals E1 to E2.....240-246 VAC
 - c. Terminals E1 to NEUTRAL.....120-123 VAC
 - d. Terminals E2 to NEUTRAL.....120-123 VAC

8. Set the generator's main circuit breaker (CB1) to its OFF or OPEN position.
9. Set the AUTO/OFF/MANUAL switch to the OFF position to shut down the generator.

NOTE:

Do NOT proceed until generator AC output voltage and frequency are correct and within stated limits. If the no-load voltage is correct but no-load frequency is incorrect, the engine governed speed may require adjustment. If no-load frequency is correct but voltage is not, the voltage regulator may require adjustment.


3.4 GENERATOR TESTS UNDER LOAD


1. Set the generator's main circuit breaker to its OFF or OPEN position.
2. Set the UTILITY SERVICE DISCONNECT circuit breaker to the OFF position.
3. Manually actuate the transfer switch main contacts to their GENERATOR (STANDBY) position. Refer to "Manual Operation".
4. To start the generator, set the AUTO/OFF/ MANUAL switch to MANUAL. When engine starts, let it stabilize for a few minutes.
5. Turn the generator's main circuit breaker to its ON or CLOSED position. The generator now powers all LOAD circuits. Check generator operation under load as follows:
 - Turn ON electrical loads to the full rated wattage/ampere capacity of the generator. DO NOT OVERLOAD.
 - With maximum rated load applied, check voltage and frequency across transfer switch terminals E1 and E2. Voltage should be greater than 230VAC and frequency should be greater than 59 Hertz.
 - Let the generator run under rated load for at least 30 minutes. With unit running, listen for unusual noises, vibration, overheating, etc., that might indicate a problem.
6. When checkout under load is complete, turn the generator's main circuit breaker to its OFF or OPEN position.
7. Let the generator run at no-load for several minutes. Then, shut down by setting the AUTO/OFF/MANUAL switch to its OFF position.
8. Move the transfer switch's main contacts back to their UTILITY position. For example, LOAD connected to UTILITY power supply. Refer to "Manual Operation". Handle and operating lever of transfer switch should be in the UP position.
9. Turn on the utility power supply to transfer switch, using the UTILITY SERVICE DISCONNECT circuit breaker. The utility power source now powers the loads.
10. Set the generator's AUTO/OFF/MANUAL switch to its AUTO position.


3.5 TESTING LOAD SHED MODULE (LSM)

A Test pushbutton is provided on the bottom of the LSM to test the operation of the tested functions. The Test button will work when the ATS is in the Utility or the Generator position.

1. Turn the Utility supply on to the ATS.
2. Press the TEST pushbutton on the LSM.
3. Verify that all of the connected loads to be "shed" become disabled. The method of verification will depend on the type of load.
4. After 5 minutes verify the priority 1 loads are enabled. Status LED L1 and Air 1 is ON.
5. After another 30 seconds, verify the priority 2 loads are enabled. Status LED L2 and Air 2 is ON.
6. After another 30 seconds, verify the priority 3 loads are enabled. Status LED L3 is ON.
7. After another 30 seconds, verify the priority 4 loads are enabled. Status LED L4 is ON.

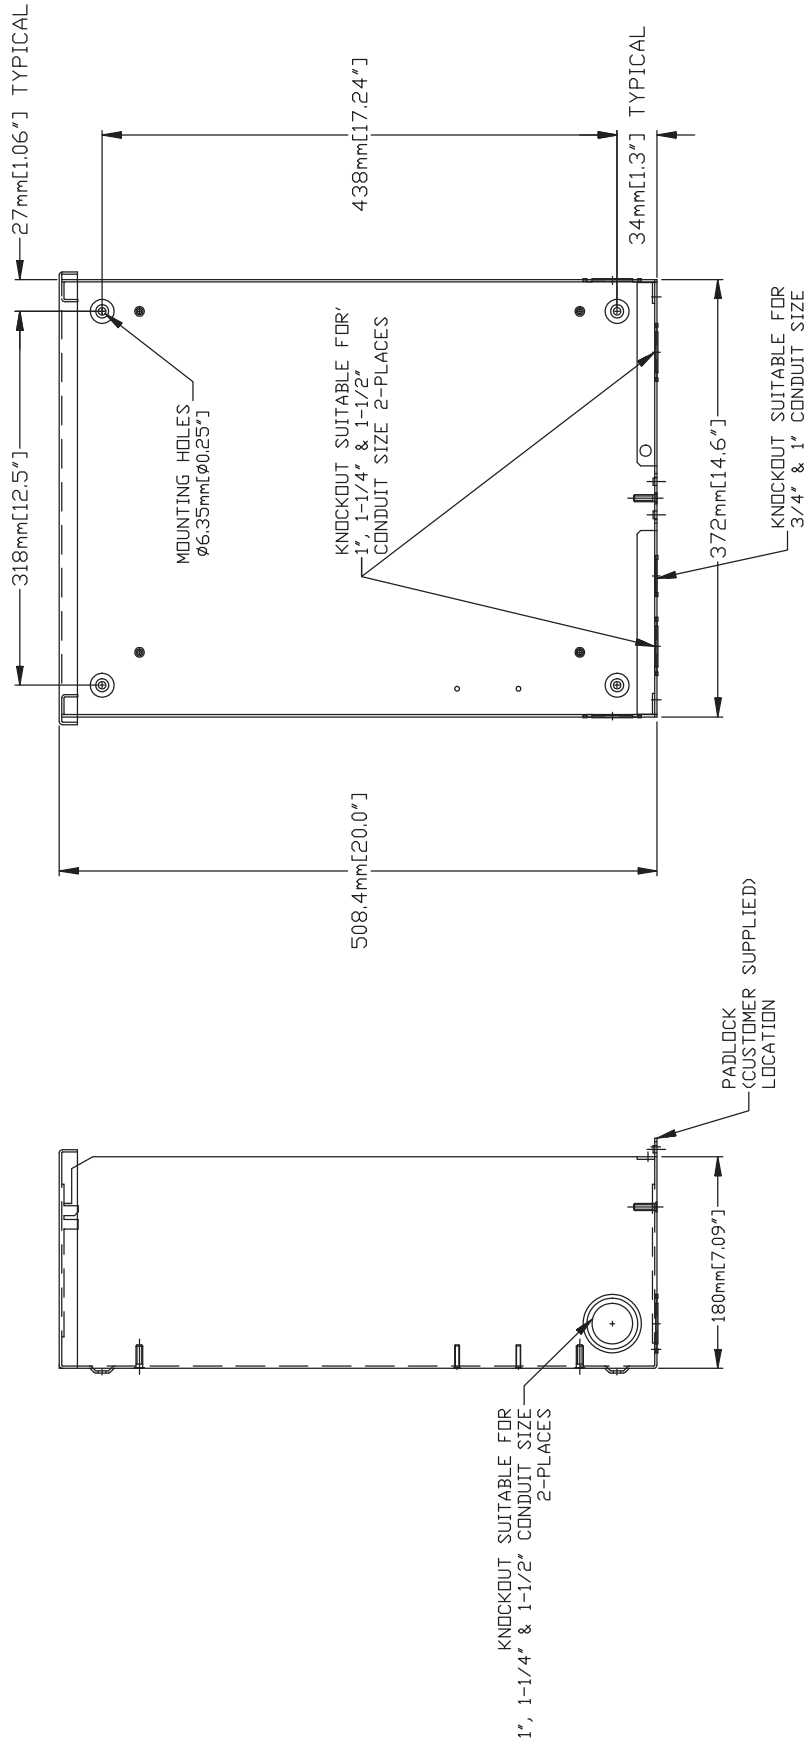

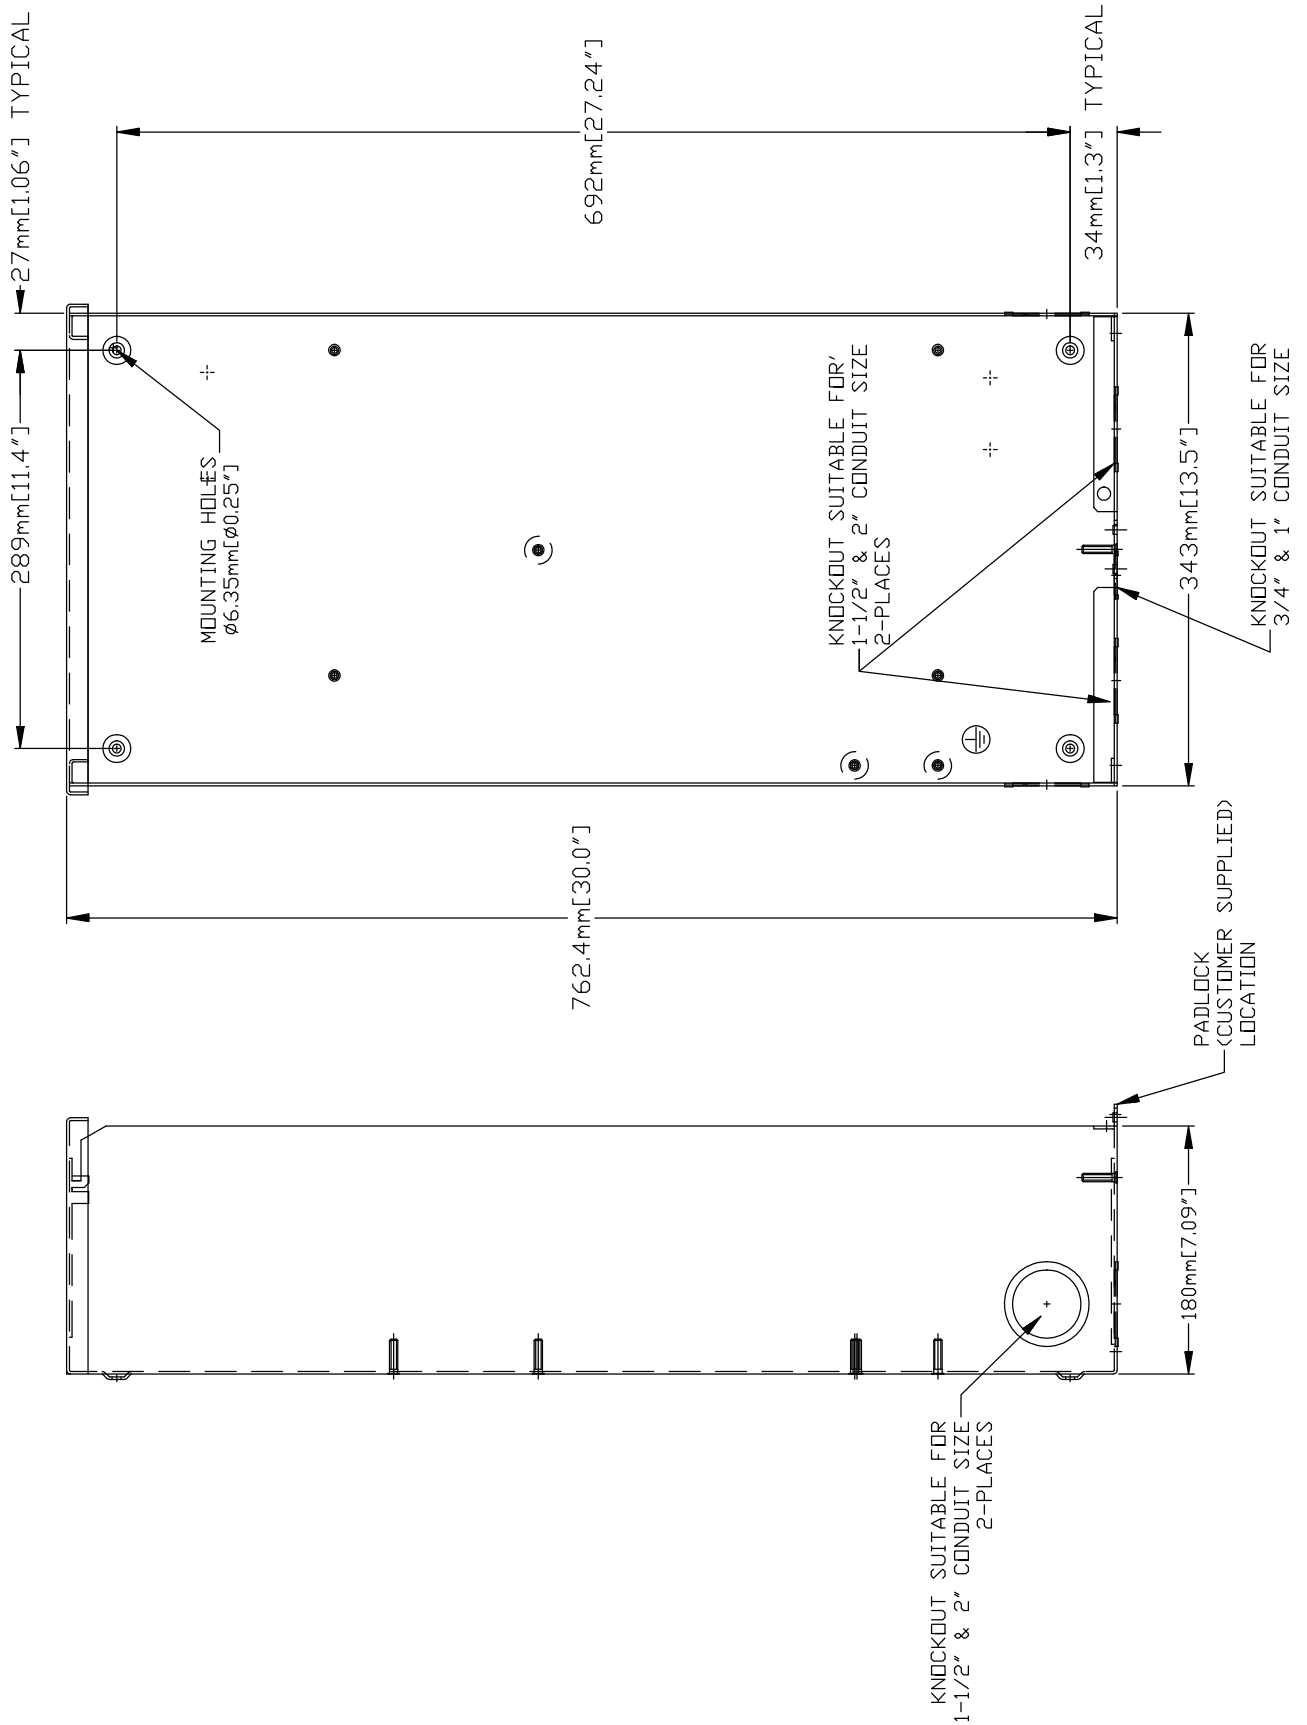

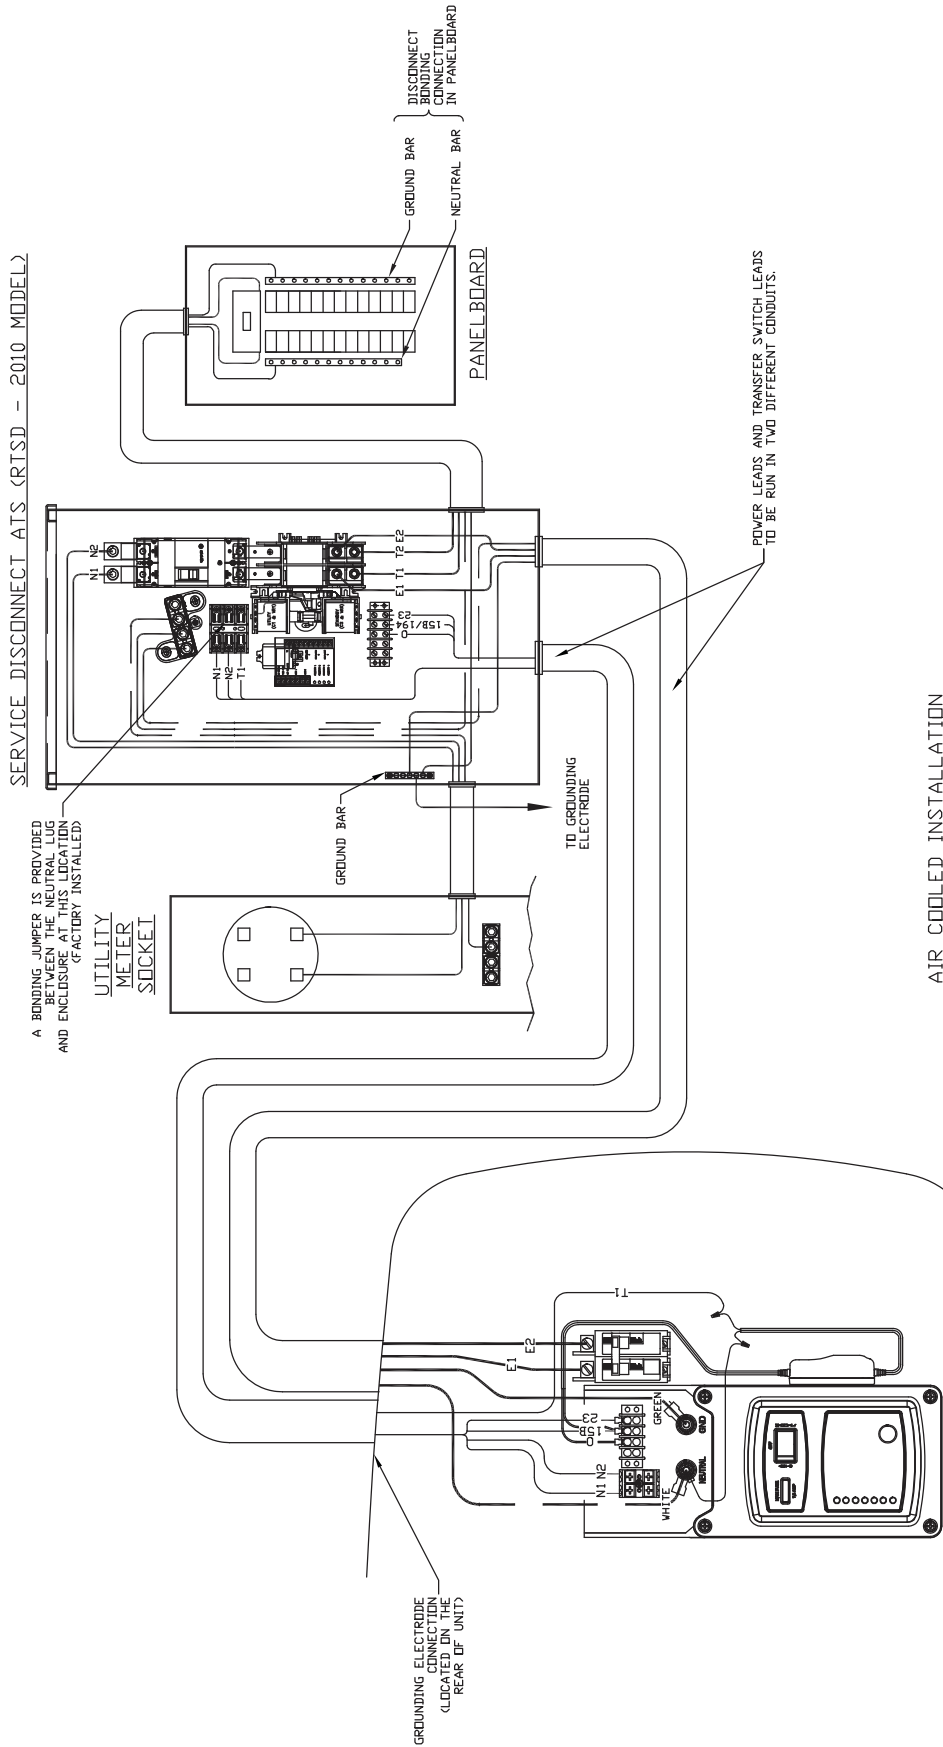

SERVICE DISCONNECT ATS (RTSD - 2010 MODEL)

A BONDING JUMPER IS PROVIDED BETWEEN THE NEUTRAL LUG AND ENCLOSURE OF THIS UNIT IF FACTORY INSTALLED.

UTILITY METER SOCKET

GROUND BAR

GROUNDING ELECTRODE CONNECTION (LOCATED AT REAR OF UNIT)

PANELBOARD


GROUND BAR
NEUTRAL BAR
DISCONNECT BONDING CONNECTION IN PANELBOARD


TO GROUNDING ELECTRODE

POWER LEADS AND TRANSFER SWITCH LEADS TO BE RUN IN TWO DIFFERENT CONDUITS.


AIR COOLED INSTALLATION


2008 AIR-COOLED HSB GENERATORS




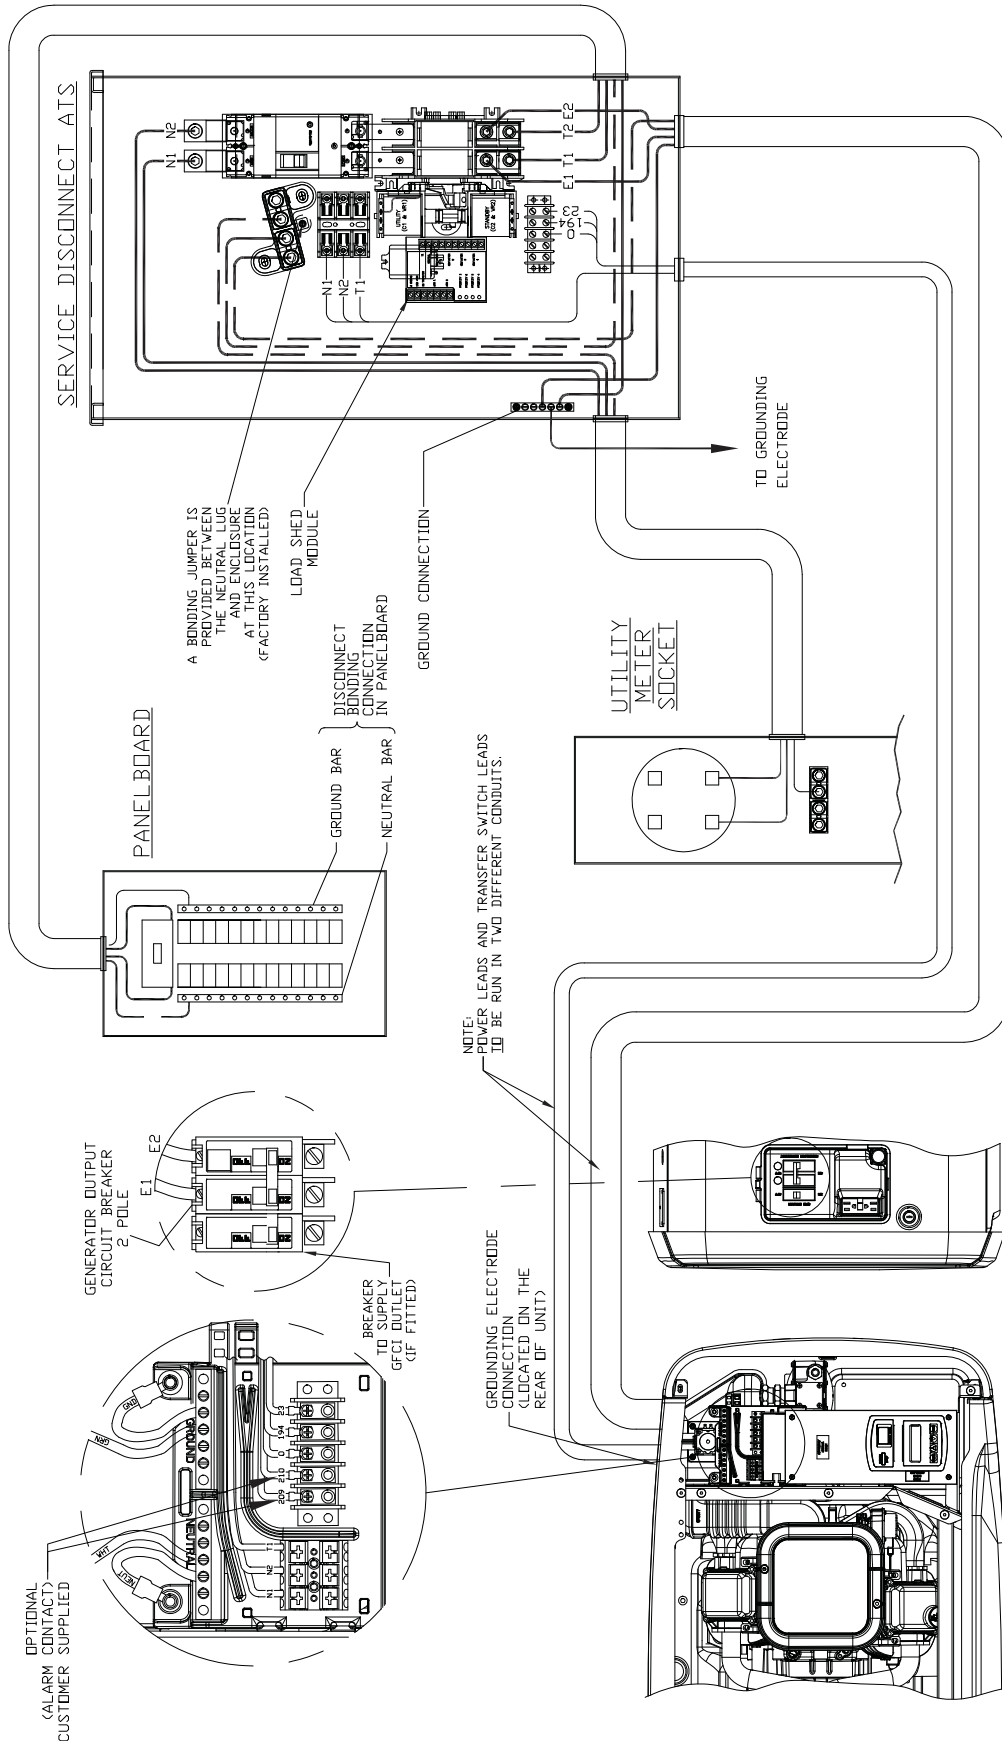


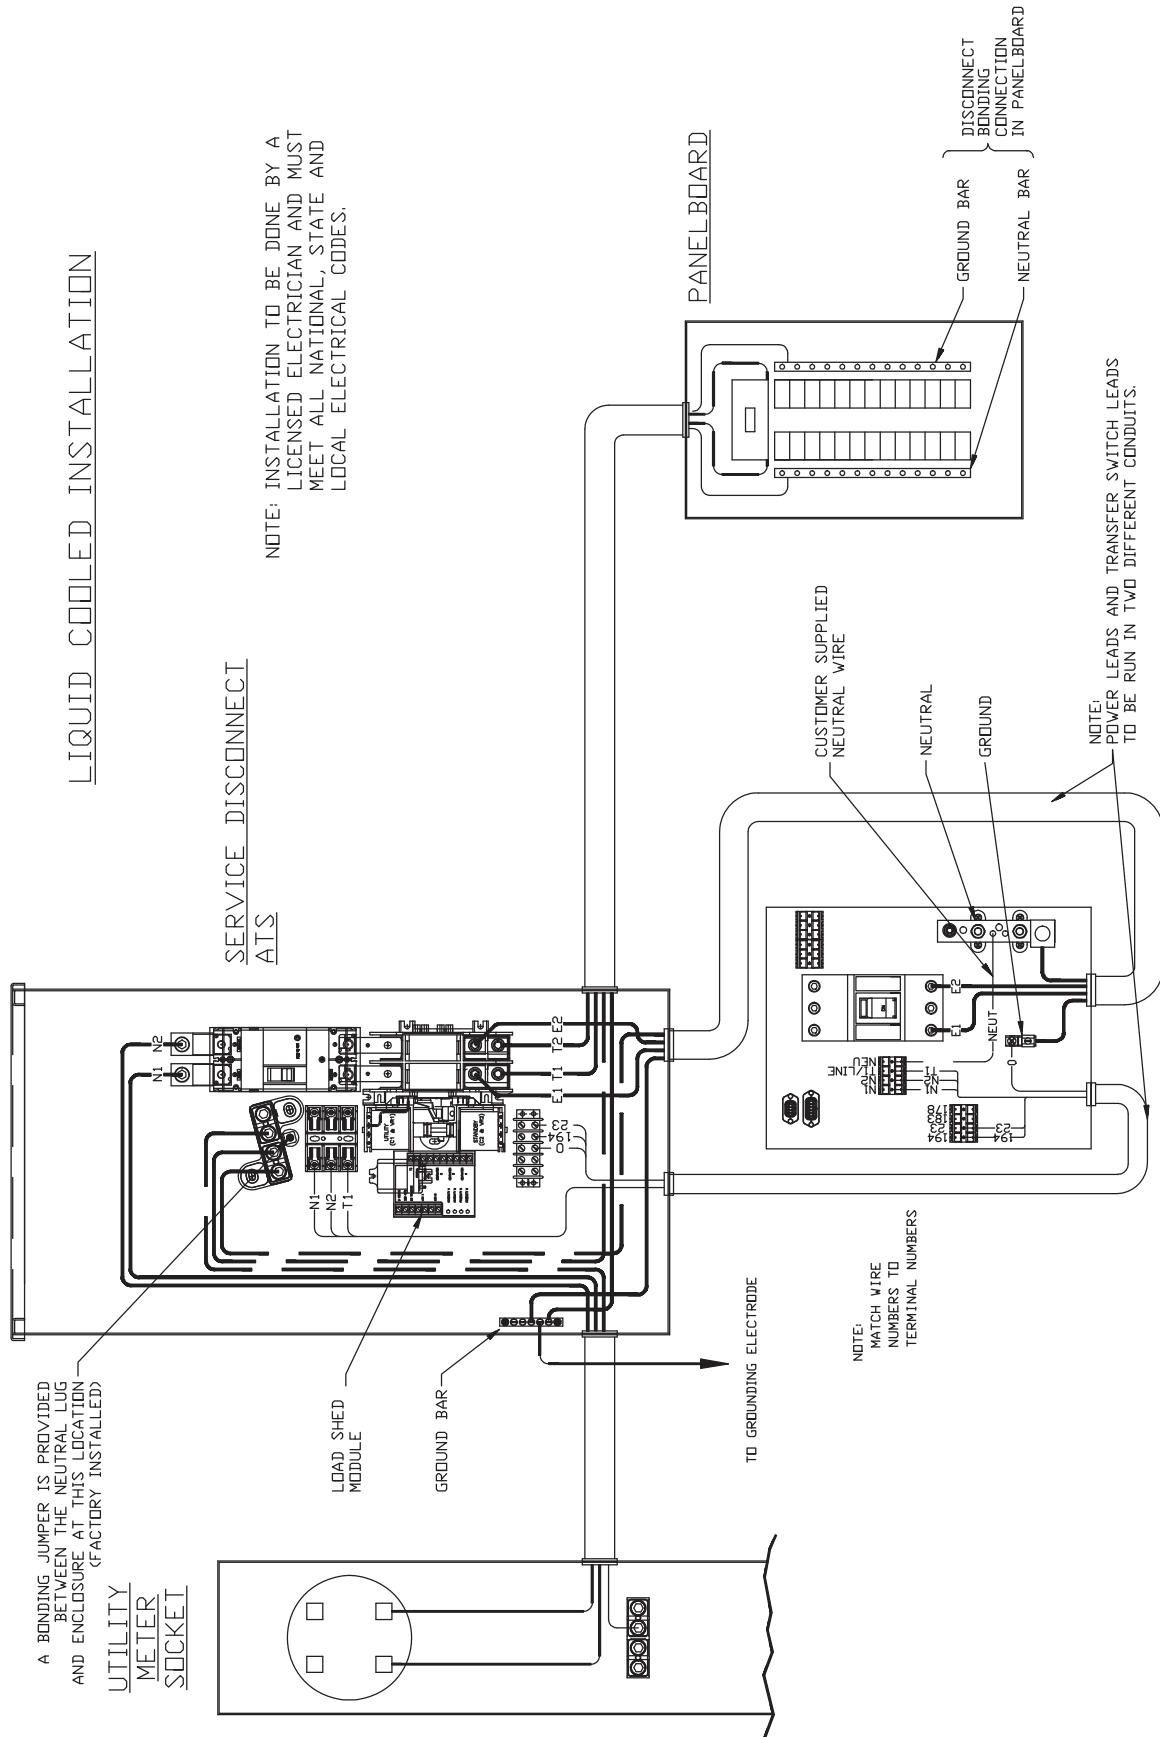

NOTE:
ALL CONTACTS SHOWN WITH
TRANSFER SWITCH IN UTILITY
POSITION.

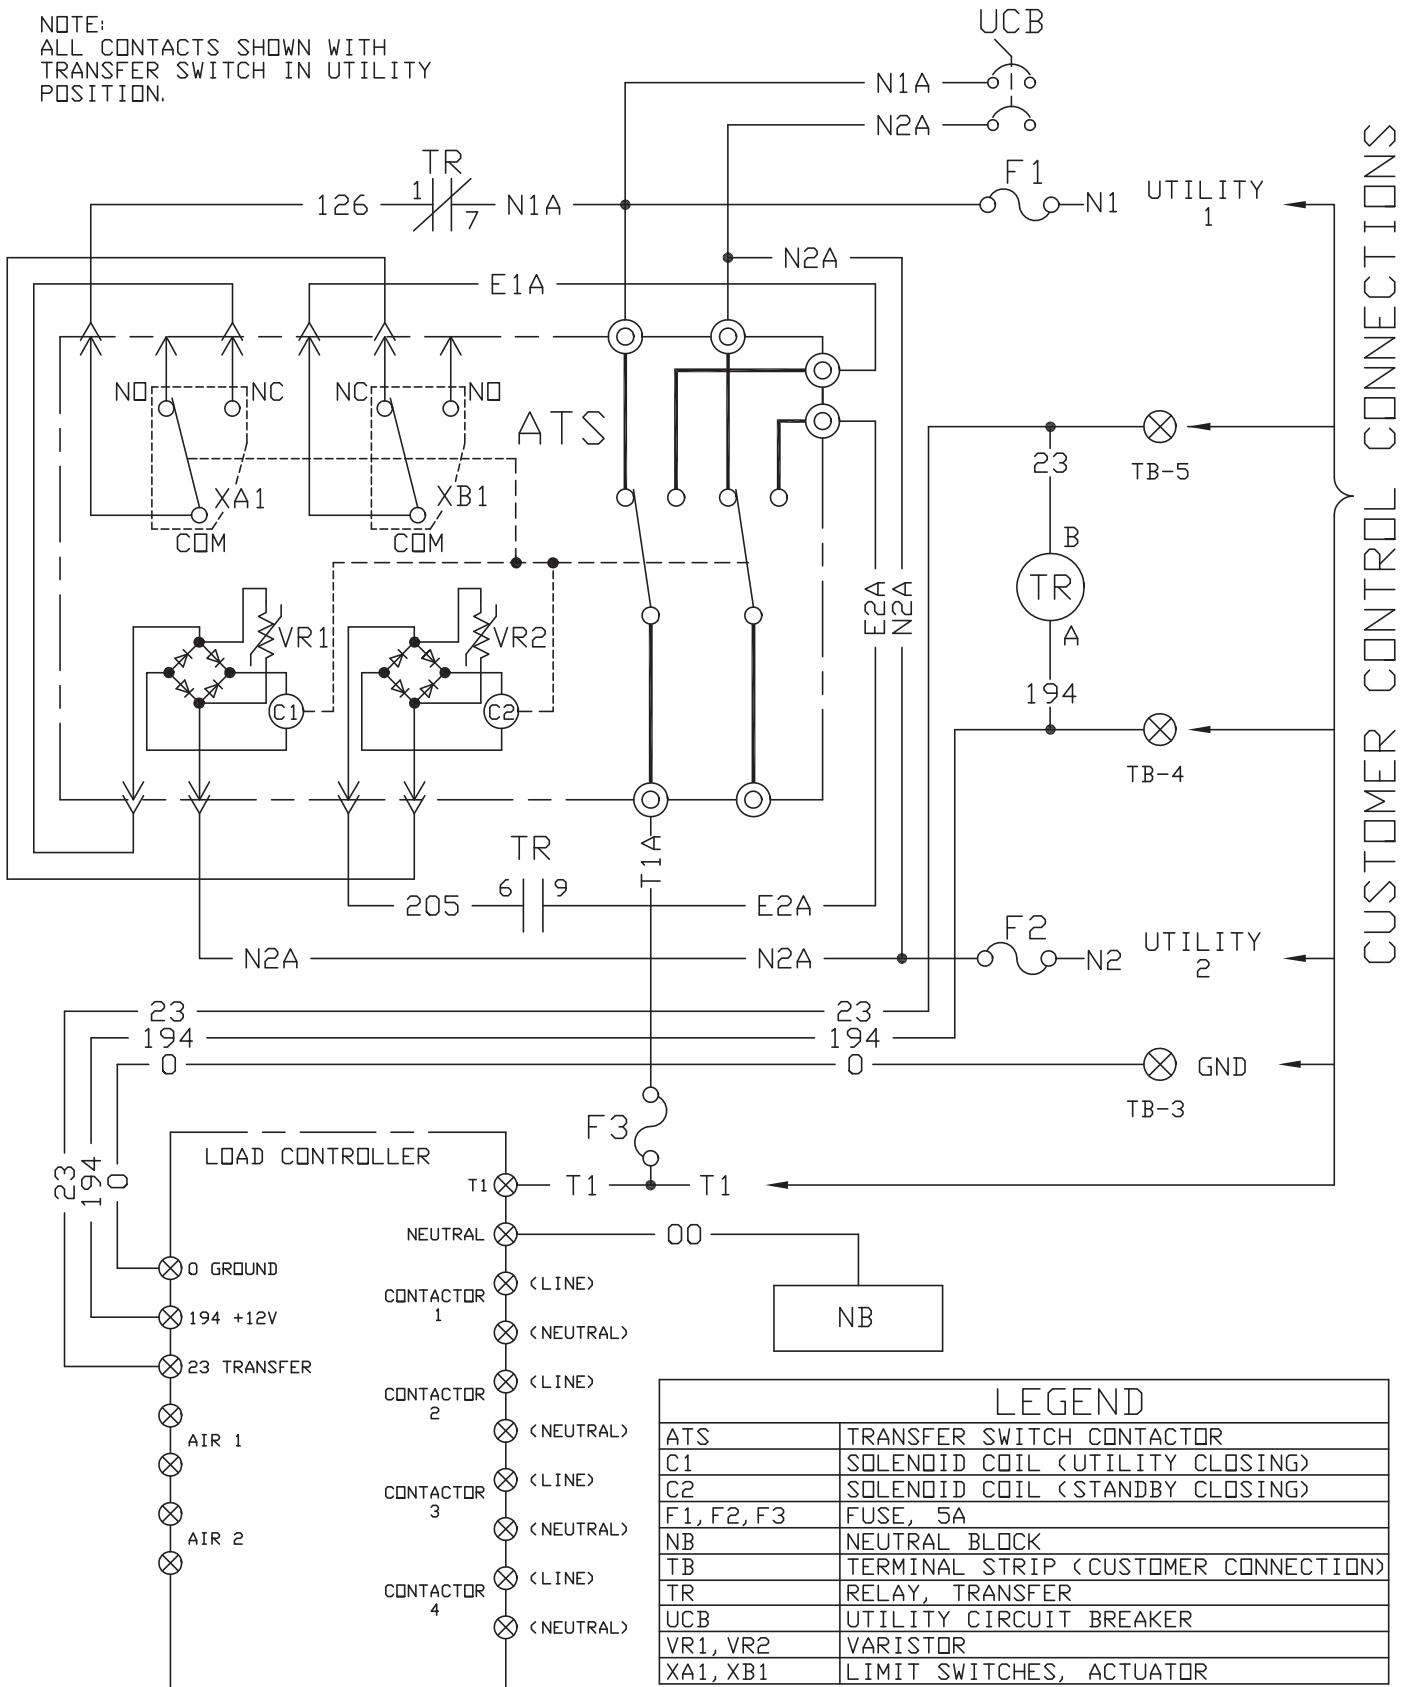


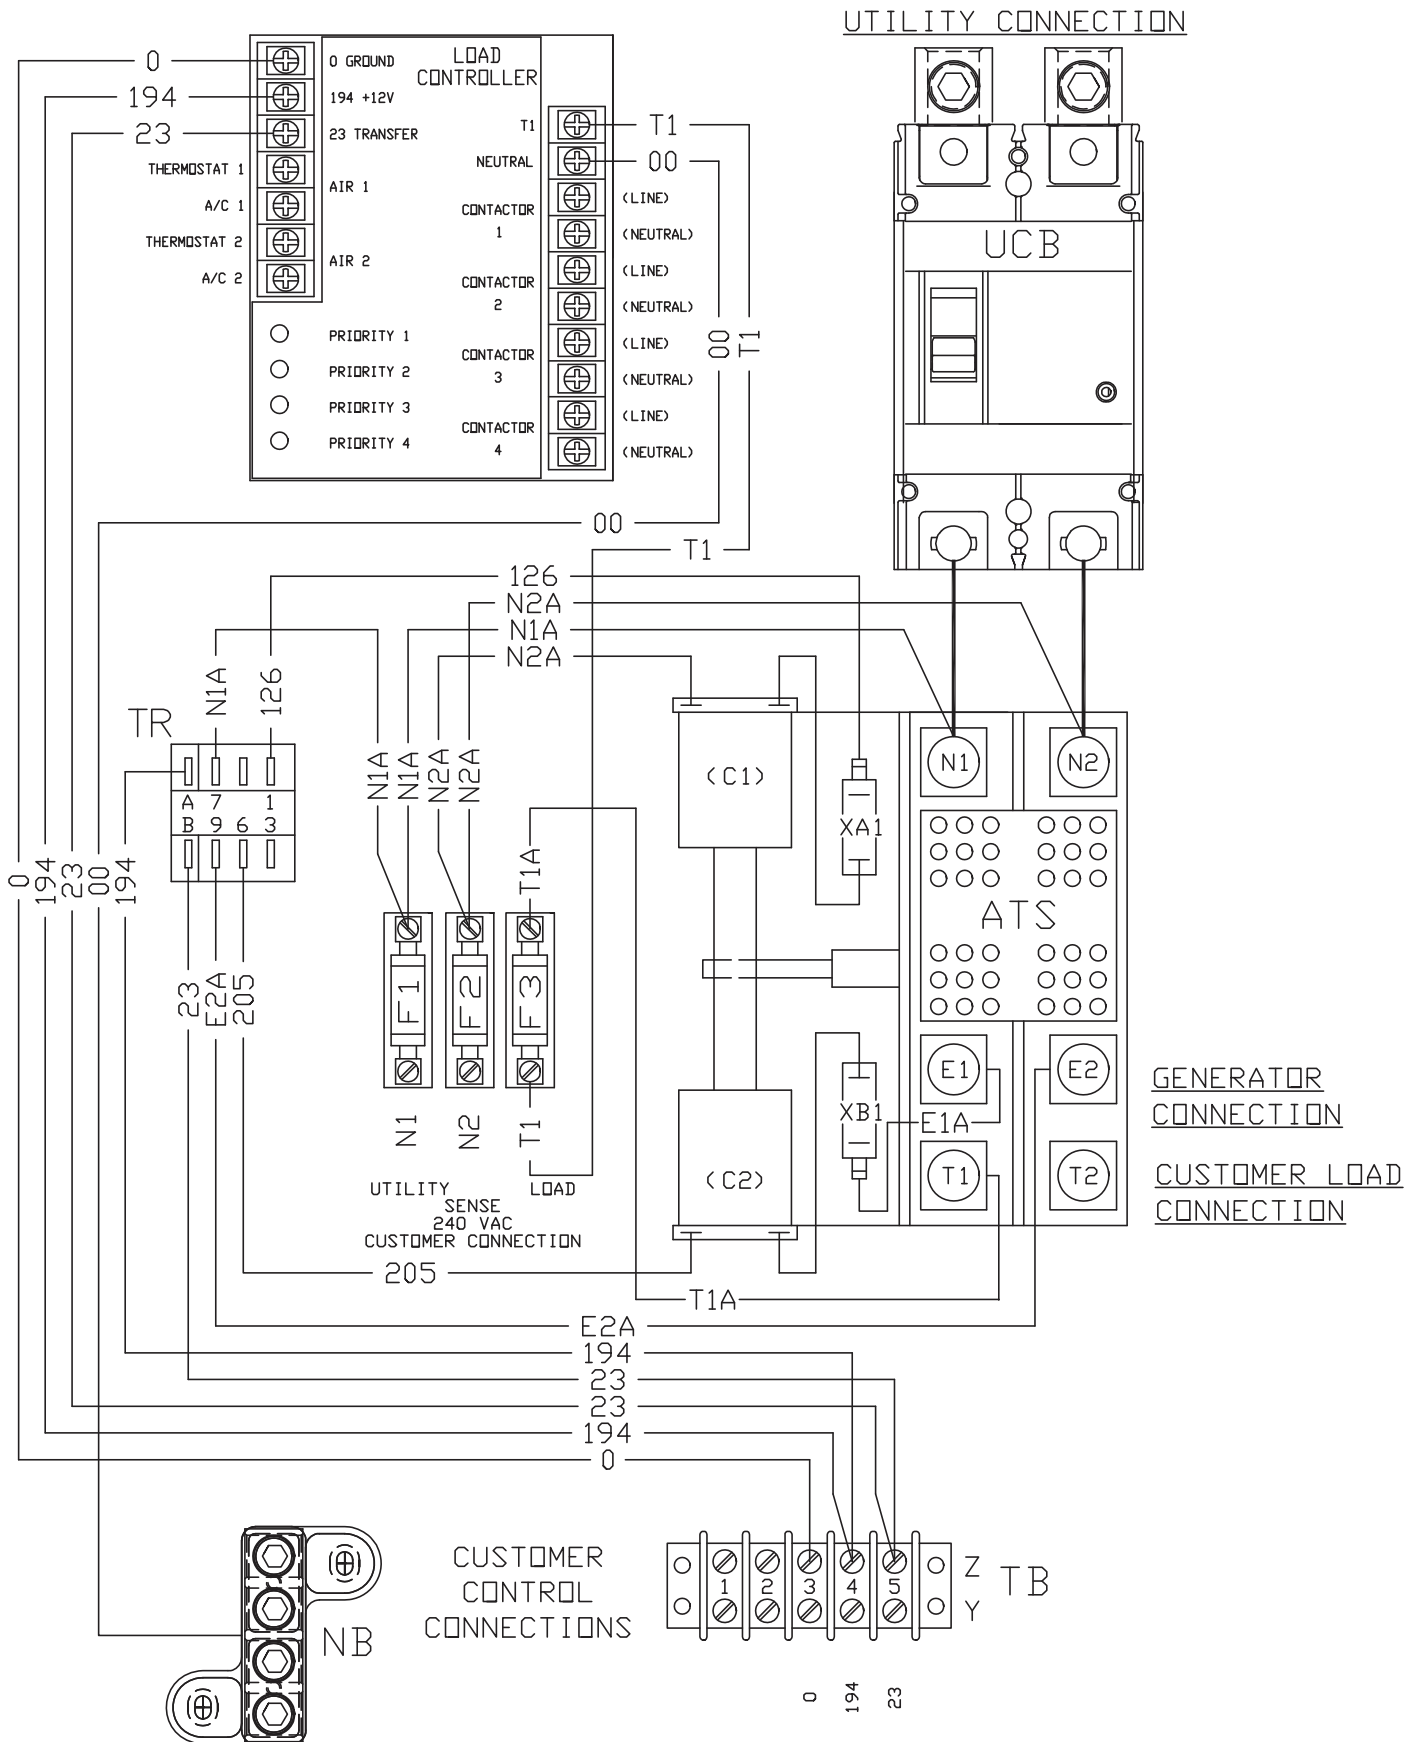

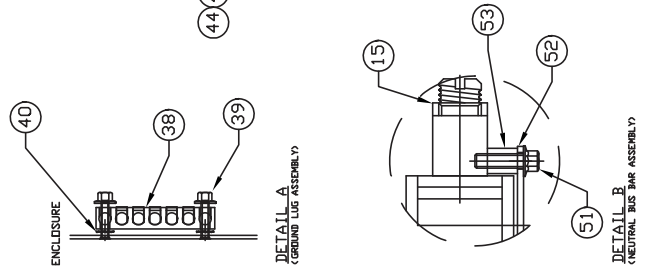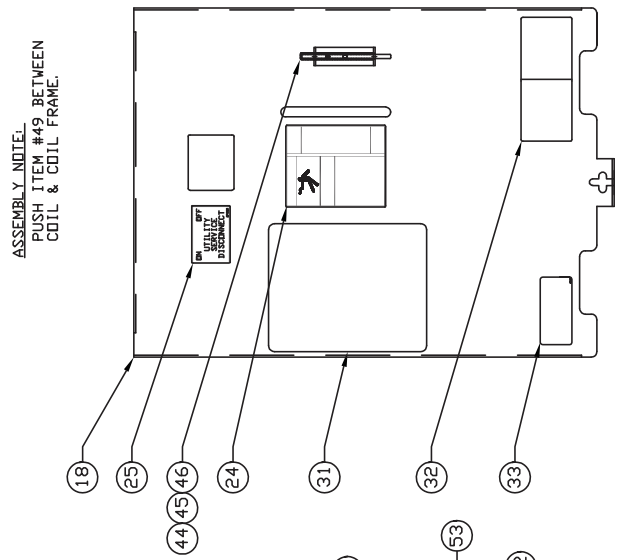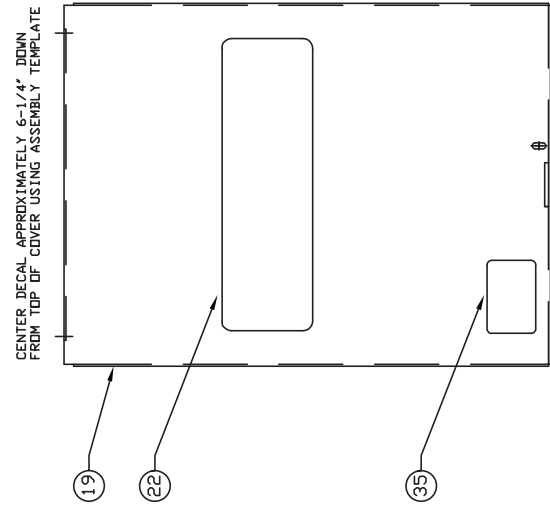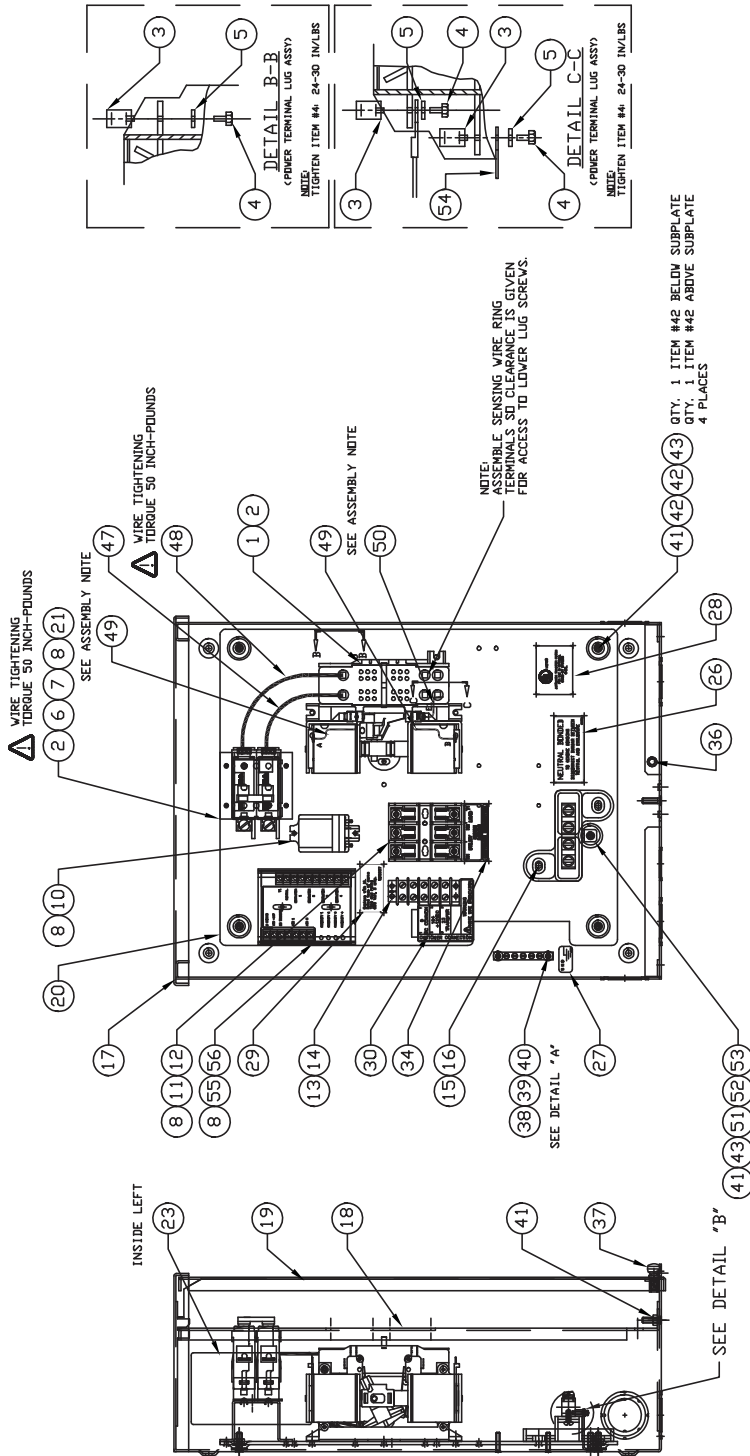


ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0C2237	1	TR SW-HSB 100A 2P 250V	29	0D3587	1	DECAL, FUSE REPLACEMENT
2	074908	6	SCREW HHTT M5-0.8 X 10 BP	30	0H7917	1	DECAL, TERMINAL STRIP
3	077033	6	LUG SLDLSS 1/0-#14X9/16 AL/CU	31	0H1558	1	DECAL, TEST SEQUENCE
4	0G7624	6	SCREW PPHM #10-32 X 5/16	32	0G3259	1	DECAL, TERMINAL SHOCK HZD BI
5	022152	6	WASHER, LOCK # 10	33	0G3274	1	DECAL, LIVE CIRCUIT ENG/FRN/SPN
6	0E7886H	1	CB 100A 2P BACK MNT SIEMENS	34	0H6389	1	DECAL, UTILITY LOAD SENSE 240V
7	0E7890	1	C/BKR MOUNTING BRACKET	35	0H7274	1	DECAL, 2008 NEC COMPLIANCE
8	0A1495	10	SCREW HHTT M4-0.7 X 10 BP	36	058000E	1	NUT TRIC 1/4-20 X .525
9	0H7258	1	WIRING HARNESS HSB (NOT SHOWN)	37	0E7213	1	THUMB SCREW 1/4-20x1/2
(2)10	0G3617	1	RELAY PNL 12VDC DPDT	38	0E6523	1	GROUND BAR (5) 4-14 AWG CONN
(2)11	0D2572	1	FUSEBLOCK 30A 600V 3 POLE	39	0F7806	2	NUT HEX FL WHIZ M4-0.7
12	073590A	3	FUSE 5A X BUSS HLDR73591	40	026579	2	WASHER SHAKEPROOF EXT #8 STEEL
(2)13	0H1605	1	BLOCK, TERM 20A 5 X 6	41	085889	6	NUT HEX 1/4-20 SS
14	0G6849	2	SCREW HHTT M5-0.8 X 16	42	022473	8	WASHER FLAT 1/4-M6 ZINC
15	0E3717	1	ASSY-NEUT BLK 100A W/TAP	43	022097	5	WASHER LOCK M6-1/4
16	090388	2	SCREW HHTT M6-1.0 X 12 MM	44	0E6193	1	BRACKET, ARM EXTENDER
17	0G51590AL14	1	ENCLOSURE, 100/200A TRANSFER SWITCH	45	0D6162	2	RIVET POP .156 X .362 AL
18	0G96650AL14	1	COVER, INSIDE TRANSFER SWITCH ENCL	(1)46	0E6155	1	ARM EXTENDER PIN
19	0G51740AL14	1	COVER, TRANSFER SWITCH	47	0G5780A	1	WIRE ASM, 2AWG 100A 2-P T/S N1A
20	0G55920GSOR	1	SUBPLATE, 100/200A XFER SW	48	0G5780B	1	WIRE ASM, 2AWG 100A 2-P T/S N2A
21	0G55930AL14	1	RISER, 100A SERVICE ENTRANCE	49	0E6303	2	WIRE-A
22	PER MODEL	1	DECAL, FRNT CVR ATS 3R SER DIS	50	0E6303C	1	WIRE-E1
23	0G3369B	REF	DECAL, XFER SW SE 100A 120/240	51	0C3992	1	SCREW HHTT M4-0.7 X 16 BP
	0H8063A	REF	DECAL, XFER SW SE 100A 120/240	52	0G6417	1	BUSBAR, NEUTRAL BLOCK
	0J3804A	REF	DECAL, XFER SW SE 100A 120/240	53	0G7226	1	5/16" BRASS SPACER
24	0E3484	1	DECAL, MANUAL OPERATING HANDLE	54	074138	1	LUG DIS QK NI-S 10X45 DEG BR/T
25	0F9969	1	DECAL, UTILITY DISCONNECT	55	0H7376A	1	ASSY PCB AC LOAD CONTROLLER
26	0G4220	1	DECAL, NEUTRAL CONNECTION	56	0H7270	1	CHANNEL SNAPTRACK 76.2 X 101.2
27	067210A	1	DECAL, GROUNDING LUG				(1) SUPPLIED WITH TRANSFER SWITCH ITEM #1
28	0G0900	1	DECAL, UL LIST HSB				(2) SUPPLIED WITH WIRE HARNESS ITEM #9

Parts List on page 22.

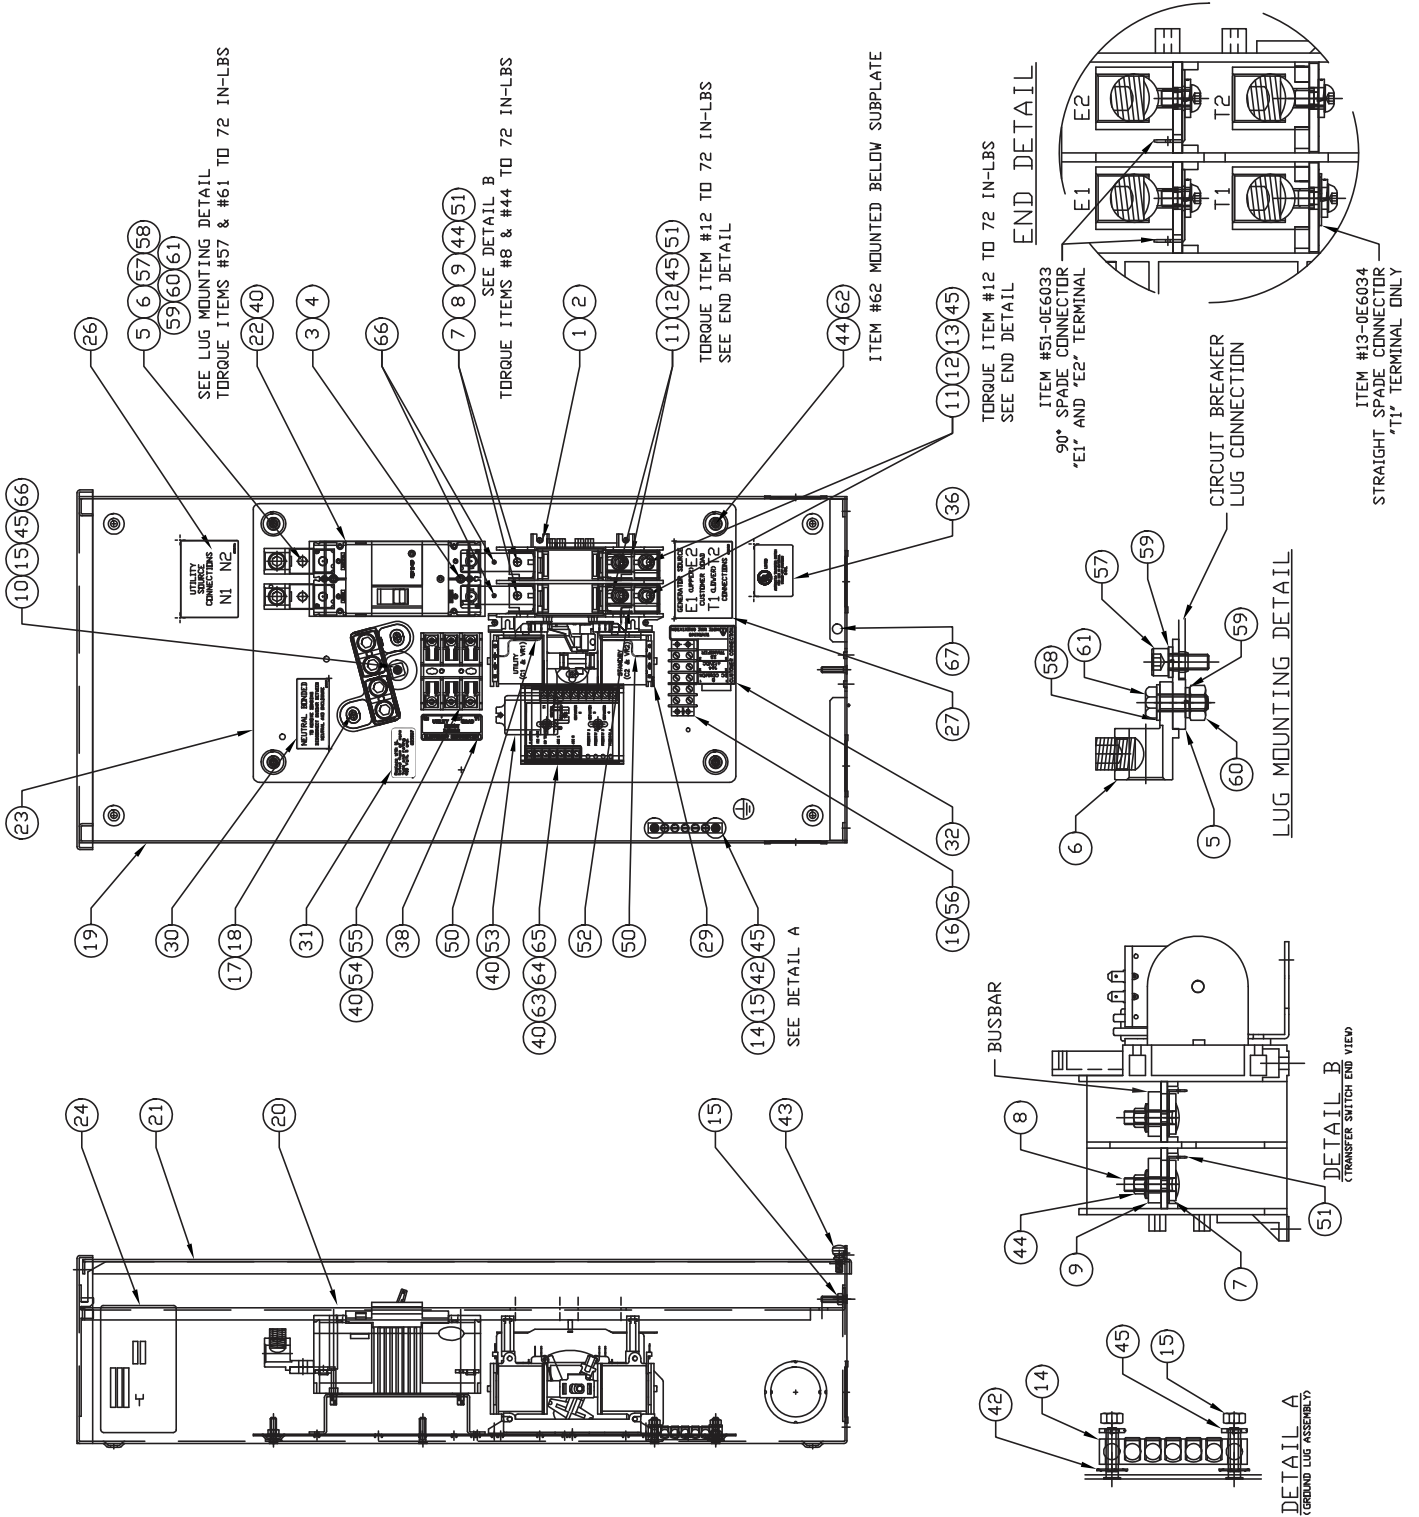

Parts List on page 22.

DECAL DETAILS
 VIEWS SHOWN WITH ITEMS #19 & #20 FULLY ASSEMBLED

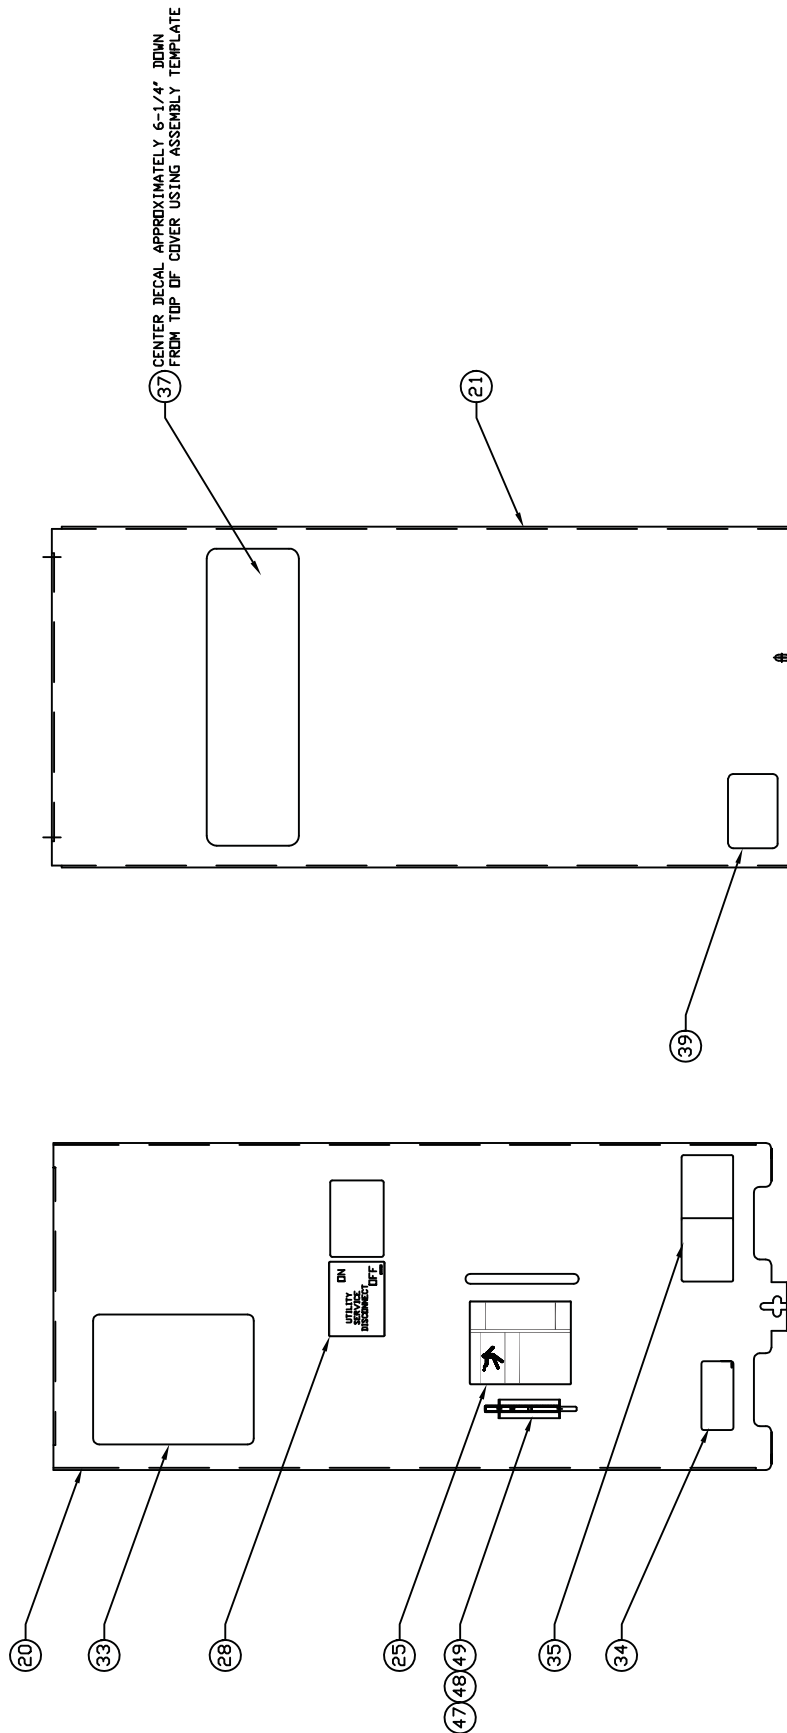

Exploded Views & Parts Lists



150A Assembly Drawing No. 0J2006\$-D

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0D9618	1	TRANSFER SW. HSB 200A 2P 250V	35	0G3259	1	DECAL, TERMINAL SHOCK HZD BI
2	074908	5	SCREW HHTT M5-0.8 X 10 BP	36	0G0900	1	DECAL, UL LIST HSB
3	0G5249	1	CIRCUIT BREAKER, 150A 2-POLE	37	PER ORDER	1	DECAL, FRNT CVR ATS 3R SER DIS
4	053640	2	SCREW RHM #8-32 X 3-1/4	38	0H6389	1	DECAL, UTILITY LOAD SENSE 240V
5	0F8843	2	BUSBAR, 200A LUG ADAPTER	39	0H7274	1	DECAL, 2008 NEC COMPLIANCE
6	0F8451	2	LUG 300 MCM-6STR	40	0A1495	10	SCREW HHTT M4-0.7 X 10 BP
7	0G4413	2	SPACER 200 AMP TRANSFER	41	064761	4	TIE WRAP UL 5.6 X .10 (NOT SHOWN)
8	024334	2	BOLT CARR 1/4-20 X 1"	42	026850	2	WASHER SHAKEPROOF EXT 1/4 STL
9	0G6352	2	BUSBAR, 200A TRANSFER SW N1,N2	43	0E7213	1	THUMB SCREW 1/4-20x1/2
10	0G6417	1	BUSBAR, NEUTRAL BLOCK	44	0G8411	6	NUT HEX FL WHIZ 1/4-20
11	0E3375	4	LUG SOLDERLESS 250-#6 AL/CU	45	022097	7	WASHER LOCK M6-1/4
12	0F1252	4	SCREW BHSC 1/4-20 X 3/8	46	0H7259	1	WIRING HARNESS HSB (NOT SHOWN)
(1)13	0E6034	1	STRAIGHT SPADE CONNECTOR	47	0E6193	1	BRACKET, ARM EXTENDER
14	0G6320	1	GROUND BAR (5) 2-14 AWG CONN	48	0D6162	2	RIVET POP .156 X .362 AL
15	085889	4	NUT HEX 1/4-20 SS	(1)49	0E6155	1	ARM EXTENDER PIN
16	066849	2	SCREW HHTT M5-0.8 X 16	50	0E6303	2	WIRE-A
17	0E3717A	1	ASSY-NEUT BLK 200-400A W/TAP	(1)51	0E6033	4	90 DEGREE DN SPADE CONNECTOR
18	090388	2	SCREW HHTT M6-1.0 X 12 MM	52	0E6303B	1	WIRE-E1
19	0H10860AL14	1	ENCLOSURE, 200A SE XFER SW	(2)53	063617	1	RELAY PNL 12VDC DPDT
20	0G96490AL14	1	COVER, INSIDE 200A DUAL BREAKER	(2)54	0D2572	1	FUSEBLOCK 30A 600V 3 POLE
21	0H10870AL14	1	COVER, TRANSFER SWITCH	55	073590A	3	FUSE 5A X BUSS HLDR73591
22	0H1485	1	CB RISER BRACKET 200A GENERAC	(2)56	0H1605	1	BLOCK TERM 20A 5 X 6 X 1100V
23	0G9650	1	SUBPLATE, 200A SE XFER SW	57	049897	4	SCREW SHC M8-1.25 X 20 G8
24	0G3369C	REF	DECAL, TRANSFER SWITCH DATA	58	022145	2	WASHER FLAT 5/16-M8 ZINC
	0J2699B	REF	DECAL, TRANSFER SWITCH DATA	59	022129	6	WASHER LOCK M8-5/16
	0J3804B	REF	DECAL, TRANSFER SWITCH DATA	60	045771	2	NUT HEX M8-1.25 G8 CLEAR ZINC
25	0E3484	1	DECAL, MANUAL OPERATING HANDLE	61	043107	2	SCREW HHC M8-1.25 X 25 C8.8
26	0G9651A	1	DECAL, UTILITY SOURCE CONN	62	022473	4	WASHER FLAT 1/4-M6 ZINC
27	0G9651B	1	DECAL, GENERATOR/CUSTOMER CONN	63	0H7376A	1	ASSY PCB AC LOAD CONTROLLER
28	0G9651C	1	DECAL, UTILITY DISCONNECT	64	0H7190	1	BRACKET LOAD SHED 200A RTS
29	0G8535	1	DECAL, TRANSFER SWITCH INFO	65	0H7270	1	CHANNEL SNAPTRACK 76.2 X 101.2
30	0G4220	1	DECAL, NEUTRAL CONNECTION	66	026902	1	SCREW HHTT #8-32 X 1/4 CZ
31	0D3587	1	DECAL, FUSE REPLACEMENT	67	058000E	1	NUT TRIC 1/4-20 X .525
32	0H7917	1	DECAL, TERMINAL STRIP				
33	0H1480	1	DECAL, TEST SEQUENCE				
34	0G3274	1	DECAL, LIVE CIRCUIT ENG/FRN/SPN				

(1) SUPPLIED WITH TRANSFER SWITCH ITEM #1


(2) SUPPLIED WITH HARNESS ITEM #46

Parts List on page 25.

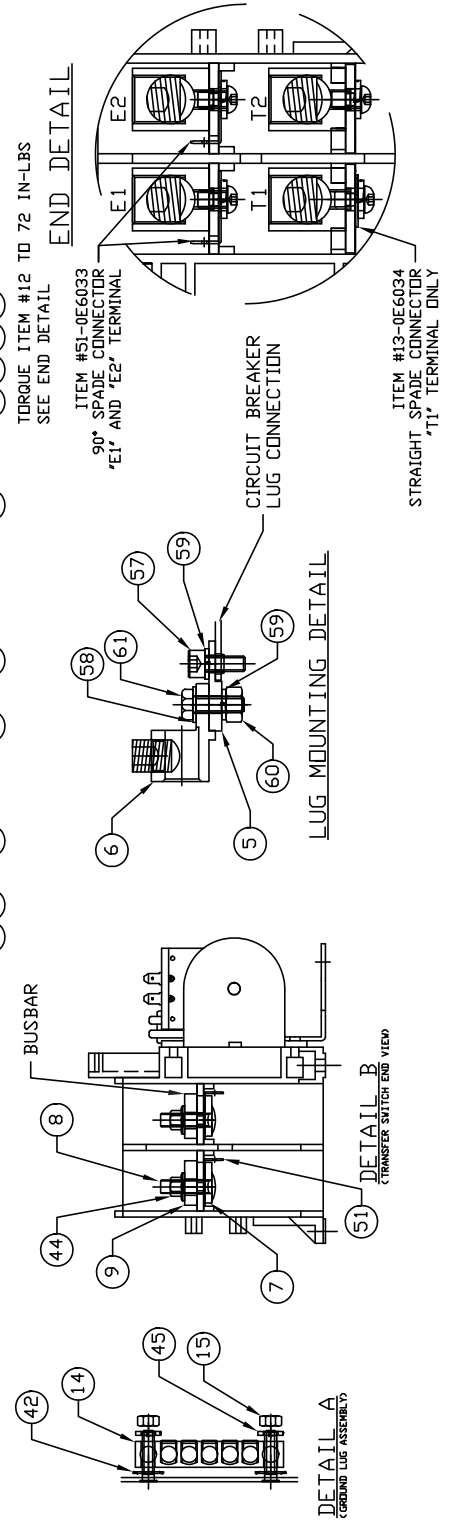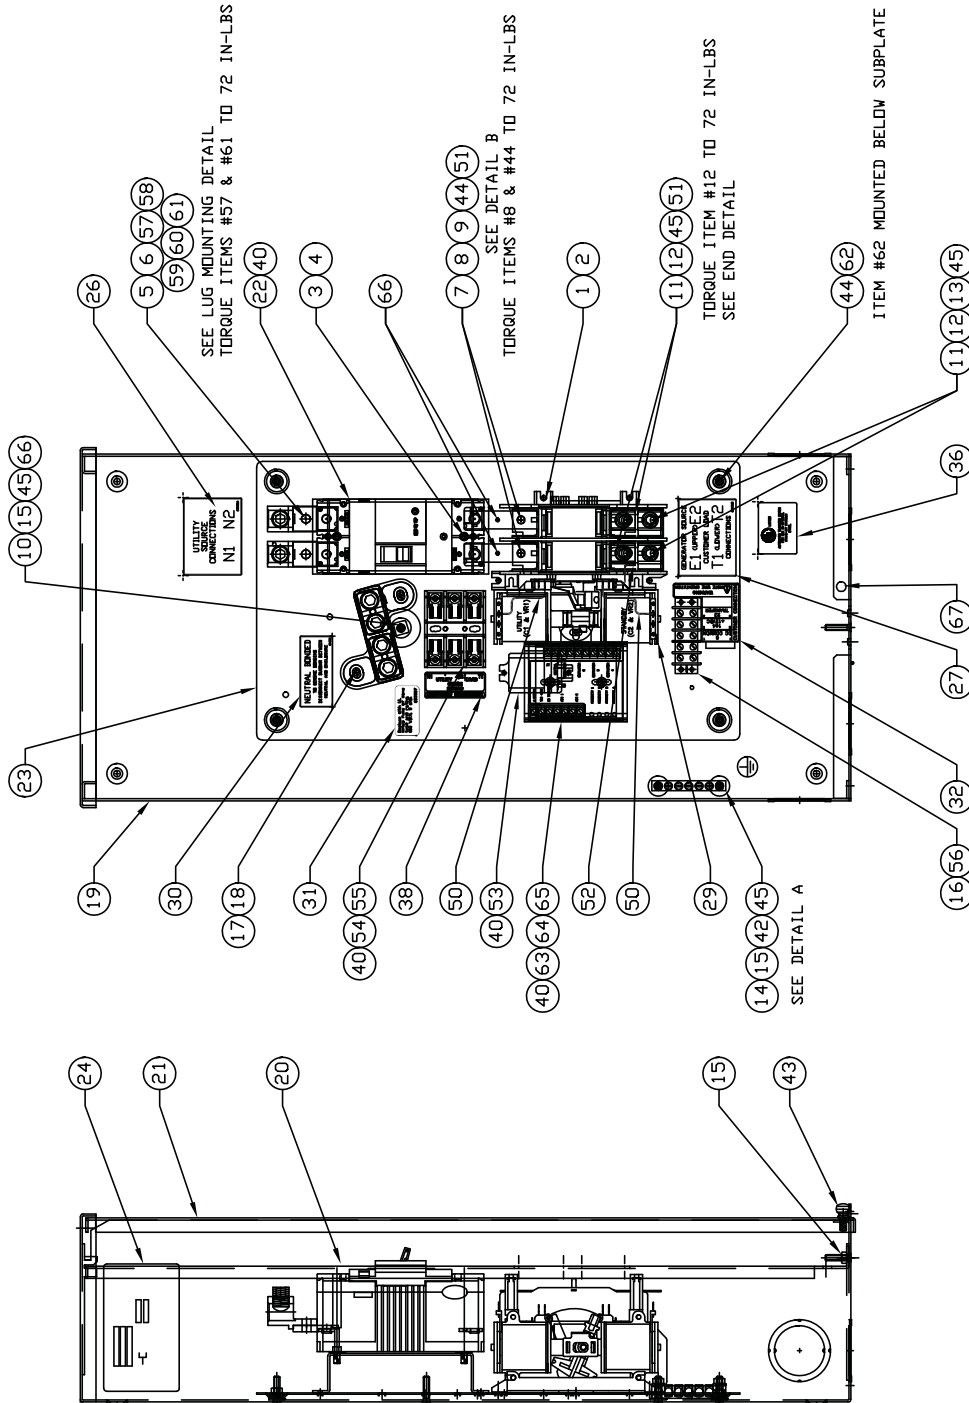

Parts List on page 25.

DECAL DETAILS
 VIEWS SHOWN WITH ITEMS #19 & #20 FULLY ASSEMBLED

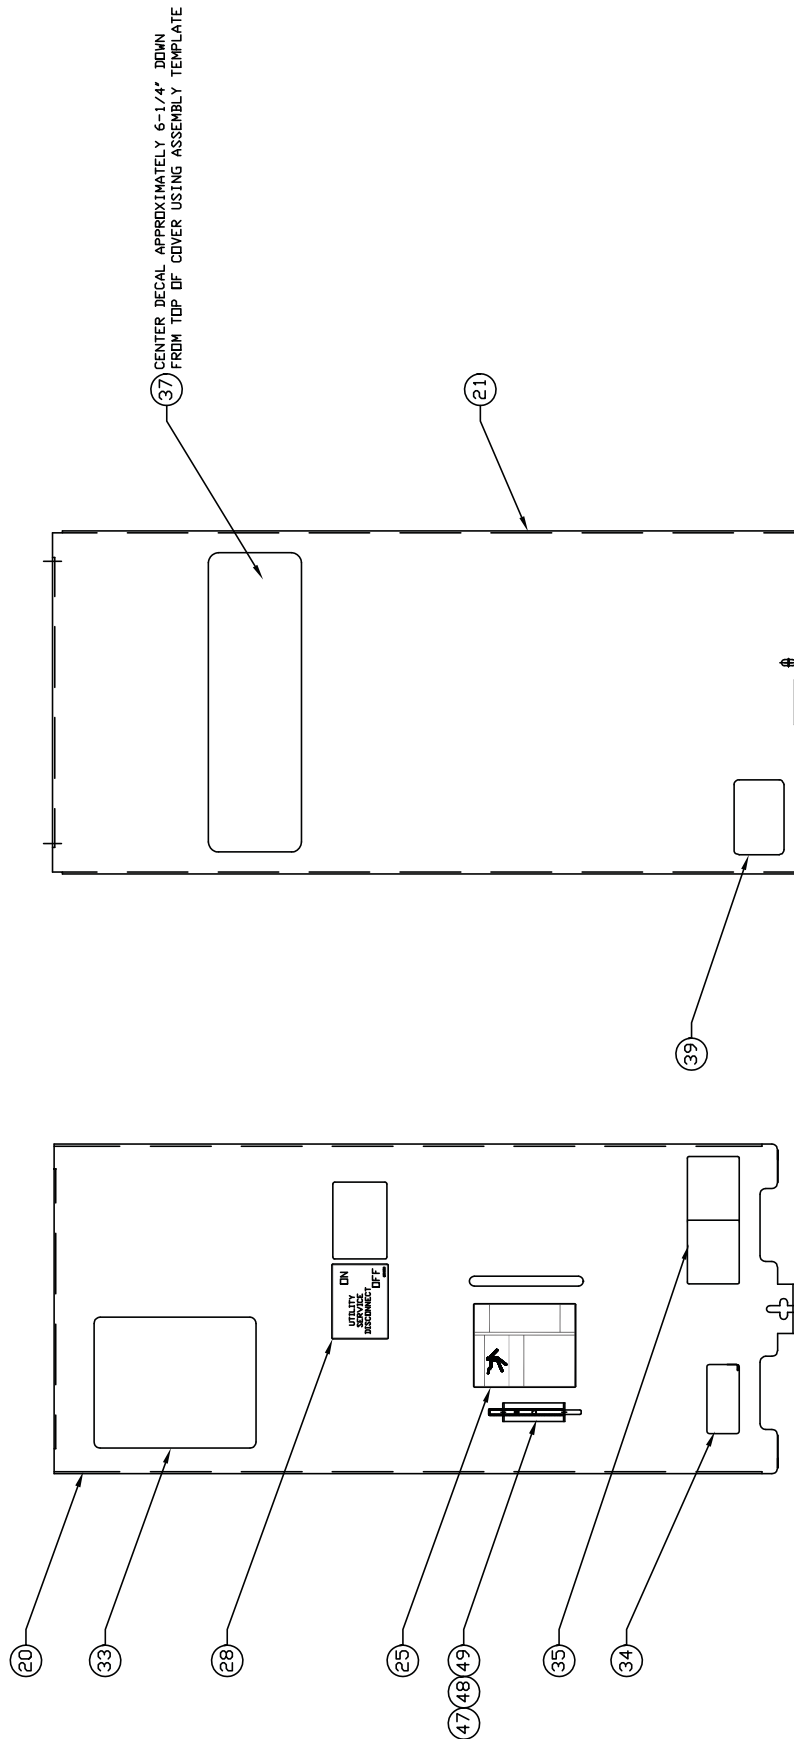

ITEM	PART NO.	QTY.	DESCRIPTION	ITEM	PART NO.	QTY.	DESCRIPTION
1	0D9618	1	TRANSFER SW. HSB 200A 2P 250V	35	0G3259	1	DECAL, TERMINAL SHOCK HZD BI
2	074908	5	SCREW HHTT M5-0.8 X 10 BP	36	0G0900	1	DECAL, UL LIST HSB
3	0G4478	1	CIRCUIT BREAKER, 200A 2-POLE	37	PER ORDER	1	DECAL, FRNT CVR ATS 3R SER DIS
4	053640	2	SCREW RHM #8-32 X 3-1/4	38	0H6389	1	DECAL, UTILITY LOAD SENSE 240V
5	0F8843	2	BUSBAR, 200A LUG ADAPTER	39	0H7274	1	DECAL, 2008 NEC COMPLIANCE
6	0F8451	2	LUG 300 MCM-6STR	40	0A1495	10	SCREW HHTT M4-0.7 X 10 BP
7	0G4413	2	SPACER 200 AMP TRANSFER	41	064761	4	TIE WRAP UL 5.6 X .10 (NOT SHOWN)
8	024334	2	BOLT CARR 1/4-20 X 1"	42	026850	2	WASHER SHAKEPROOF EXT 1/4 STL
9	0G6352	2	BUSBAR, 200A TRANSFER SW N1,N2	43	0E7213	1	THUMB SCREW 1/4-20x1/2
10	0G6417	1	BUSBAR, NEUTRAL BLOCK	44	0G8411	6	NUT HEX FL WHIZ 1/4-20
11	0E3375	4	LUG SOLDERLESS 250-#6 AL/CU	45	022097	7	WASHER LOCK M6-1/4
12	0F1252	4	SCREW BHSC 1/4-20 X 3/8	46	0H7259	1	WIRING HARNESS HSB (NOT SHOWN)
(1)13	0E6034	1	STRAIGHT SPADE CONNECTOR	47	0E6193	1	BRACKET, ARM EXTENDER
14	0G6320	1	GROUND BAR (5) 2-14 AWG CONN	48	0D6162	2	RIVET POP .156 X .362 AL
15	085889	4	NUT HEX 1/4-20 SS	(1)49	0E6155	1	ARM EXTENDER PIN
16	066849	2	SCREW HHTT M5-0.8 X 16	50	0E6303	2	WIRE-A
17	0E3717A	1	ASSY-NEUT BLK 200-400A W/TAP	(1)51	0E6033	4	90 DEGREE DN SPADE CONNECTOR
18	090388	2	SCREW HHTT M6-1.0 X 12 MM	52	0E6303B	1	WIRE-E1
19	0H10860AL14	1	ENCLOSURE, 200A SE XFER SW	(2)53	063617	1	RELAY PNL 12VDC DPDT
20	0G96490AL14	1	COVER, INSIDE 200A DUAL BREAKER	(2)54	0D2572	1	FUSEBLOCK 30A 600V 3 POLE
21	0H10870AL14	1	COVER, TRANSFER SWITCH	55	073590A	3	FUSE 5A X BUSS HLDR73591
22	0H1485	1	CB RISER BRACKET 200A GENERAC	(2)56	0H1605	1	BLOCK TERM 20A 5 X 6 X 1100V
23	0G9650	1	SUBPLATE, 200A SE XFER SW	57	049897	4	SCREW SHC M8-1.25 X 20 G8
24	0G3369A	REF	DECAL, TRANSFER SWITCH DATA	58	022145	2	WASHER FLAT 5/16-M8 ZINC
	0H8063B	REF	DECAL, TRANSFER SWITCH DATA	59	022129	6	WASHER LOCK M8-5/16
	0J3804C	REF	DECAL, TRANSFER SWITCH DATA	60	045771	2	NUT HEX M8-1.25 G8 CLEAR ZINC
25	0E3484	1	DECAL, MANUAL OPERATING HANDLE	61	043107	2	SCREW HHC M8-1.25 X 25 C8.8
26	0G9651A	1	DECAL, UTILITY SOURCE CONN	62	022473	4	WASHER FLAT 1/4-M6 ZINC
27	0G9651B	1	DECAL, GENERATOR/CUSTOMER CONN	63	0H7376A	1	ASSY PCB AC LOAD CONTROLLER
28	0G9651C	1	DECAL, UTILITY DISCONNECT	64	0H7190	1	BRACKET LOAD SHED 200A RTS
29	0G8535	1	DECAL, TRANSFER SWITCH INFO	65	0H7270	1	CHANNEL SNAPTRACK 76.2 X 101.2
30	0G4220	1	DECAL, NEUTRAL CONNECTION	66	026902	1	SCREW HHTT #8-32 X 1/4 CZ
31	0D3587	1	DECAL, FUSE REPLACEMENT	67	058000E	1	NUT TRIC 1/4-20 X .525
32	0H7917	1	DECAL, TERMINAL STRIP				
33	0H1480	1	DECAL, TEST SEQUENCE				
34	0G3274	1	DECAL, LIVE CIRCUIT ENG/FRN/SPN				

(1) SUPPLIED WITH TRANSFER SWITCH ITEM #1

(2) SUPPLIED WITH HARNESS ITEM #46

